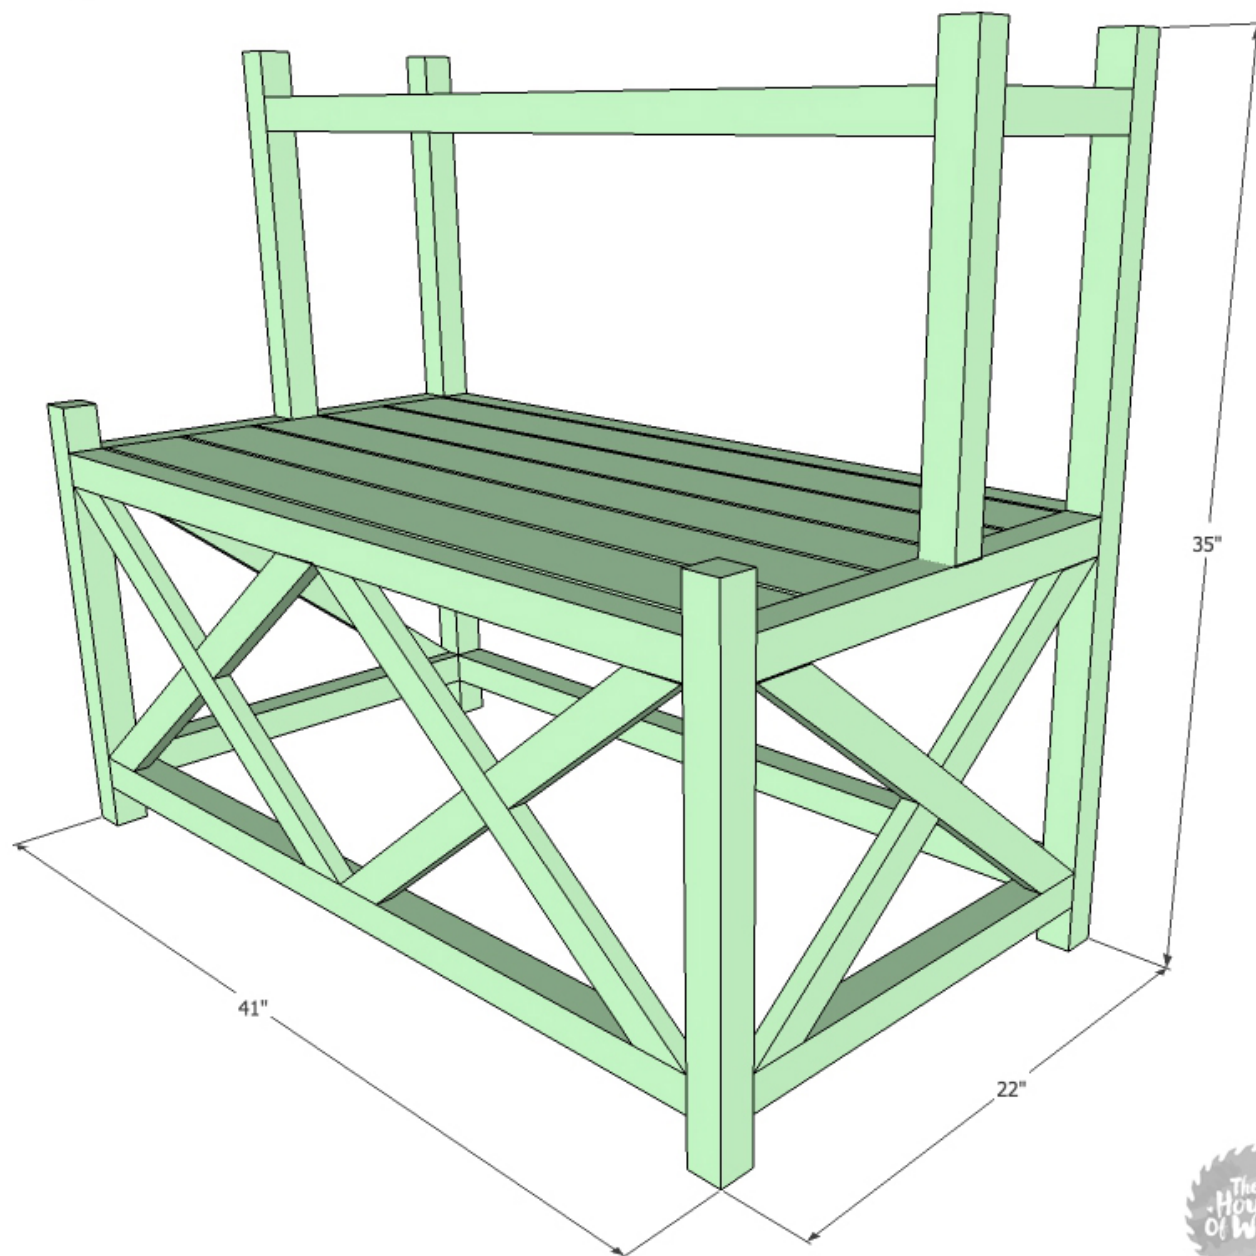


Bungalow Plant Stand



MATERIALS:

5 – 2x2x8'
 2 – 1x2x8'
 3 – 1x4x8'
 2 ½" Pocket Hole Screws
 1 ¼" Pocket Hole Screws
 Wood Glue

CUT LIST:

2 – 2x2 @ 35" (back legs)
 6 – 2x2 @ 38" (rails)
 4 – 2x2 @ 19" (rails)
 2 – 2x2 @ 20" (front legs)
 2 – 2x2 @ 17" (stiles)
 2 – 2x2 @ 7 ¾" (rails)
 7 – 1x4 @ 38" (shelf slats)
 4 – 1x2 @ 21" (long X pieces)
 8 – 1x2 @ 10 ½" (short X pieces)

TOOLS:

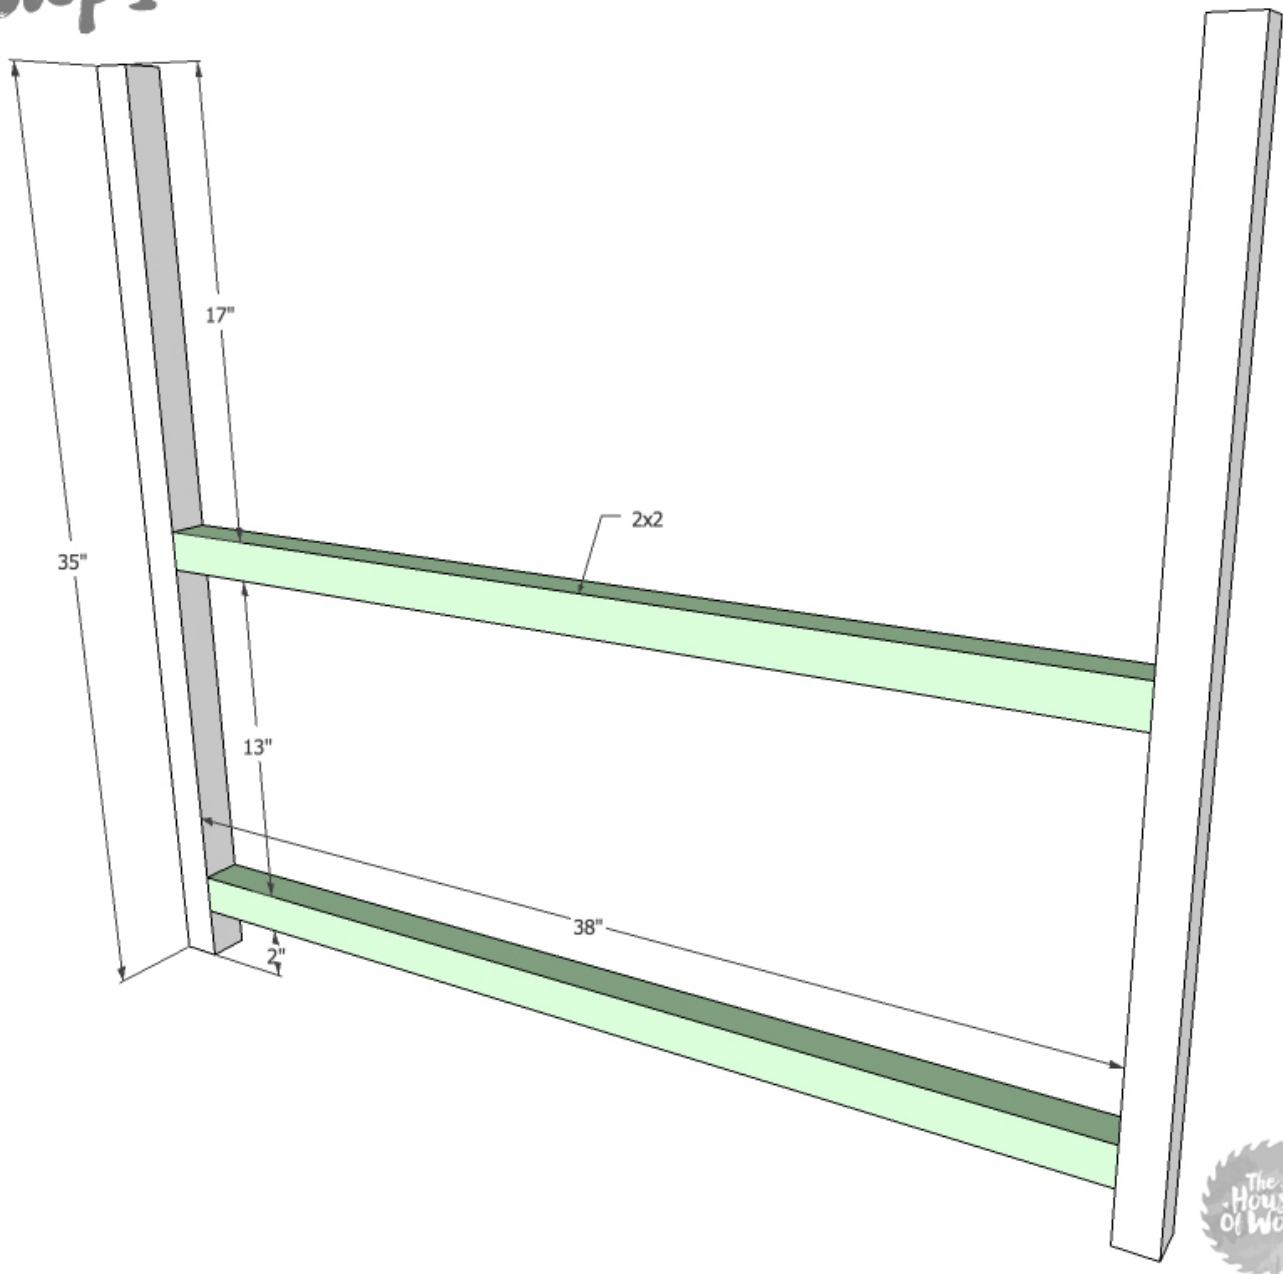
Tape Measure
Pencil
Miter Saw
Safety Glasses

Speed Square
Drill
Kreg Jig
Hearing Protection

STEP 1

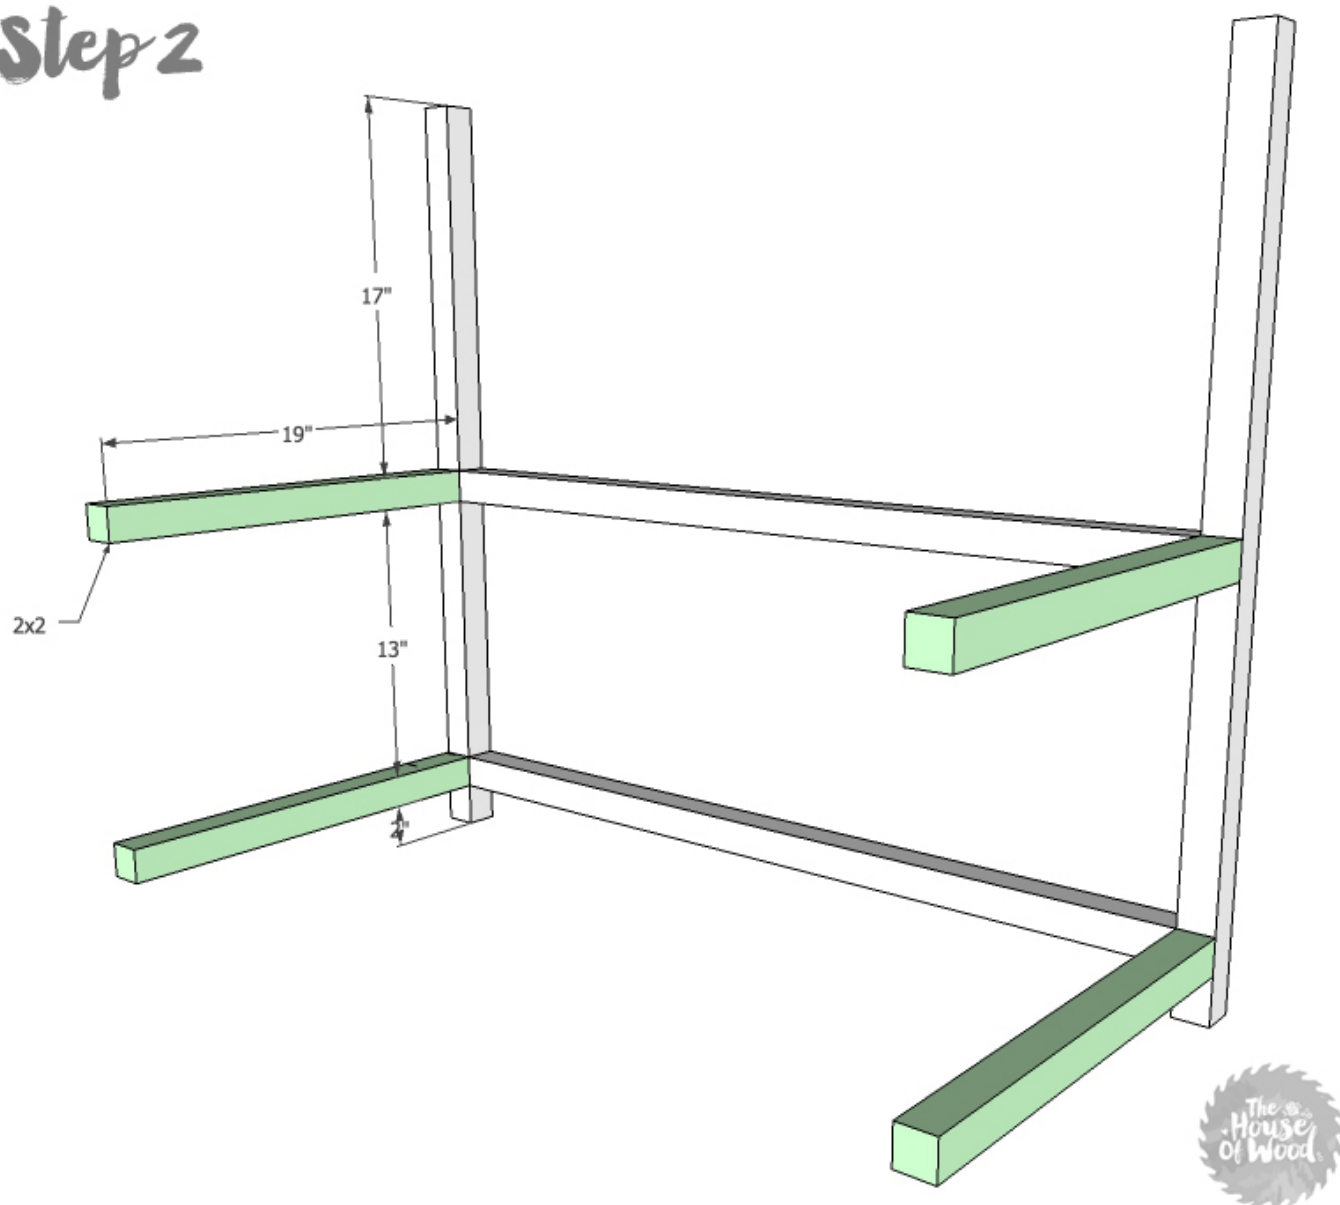
Drill 1 ½" pocket holes into back rails and attach it to the back legs with 2 ½" pocket hole screws and glue.

Step 1



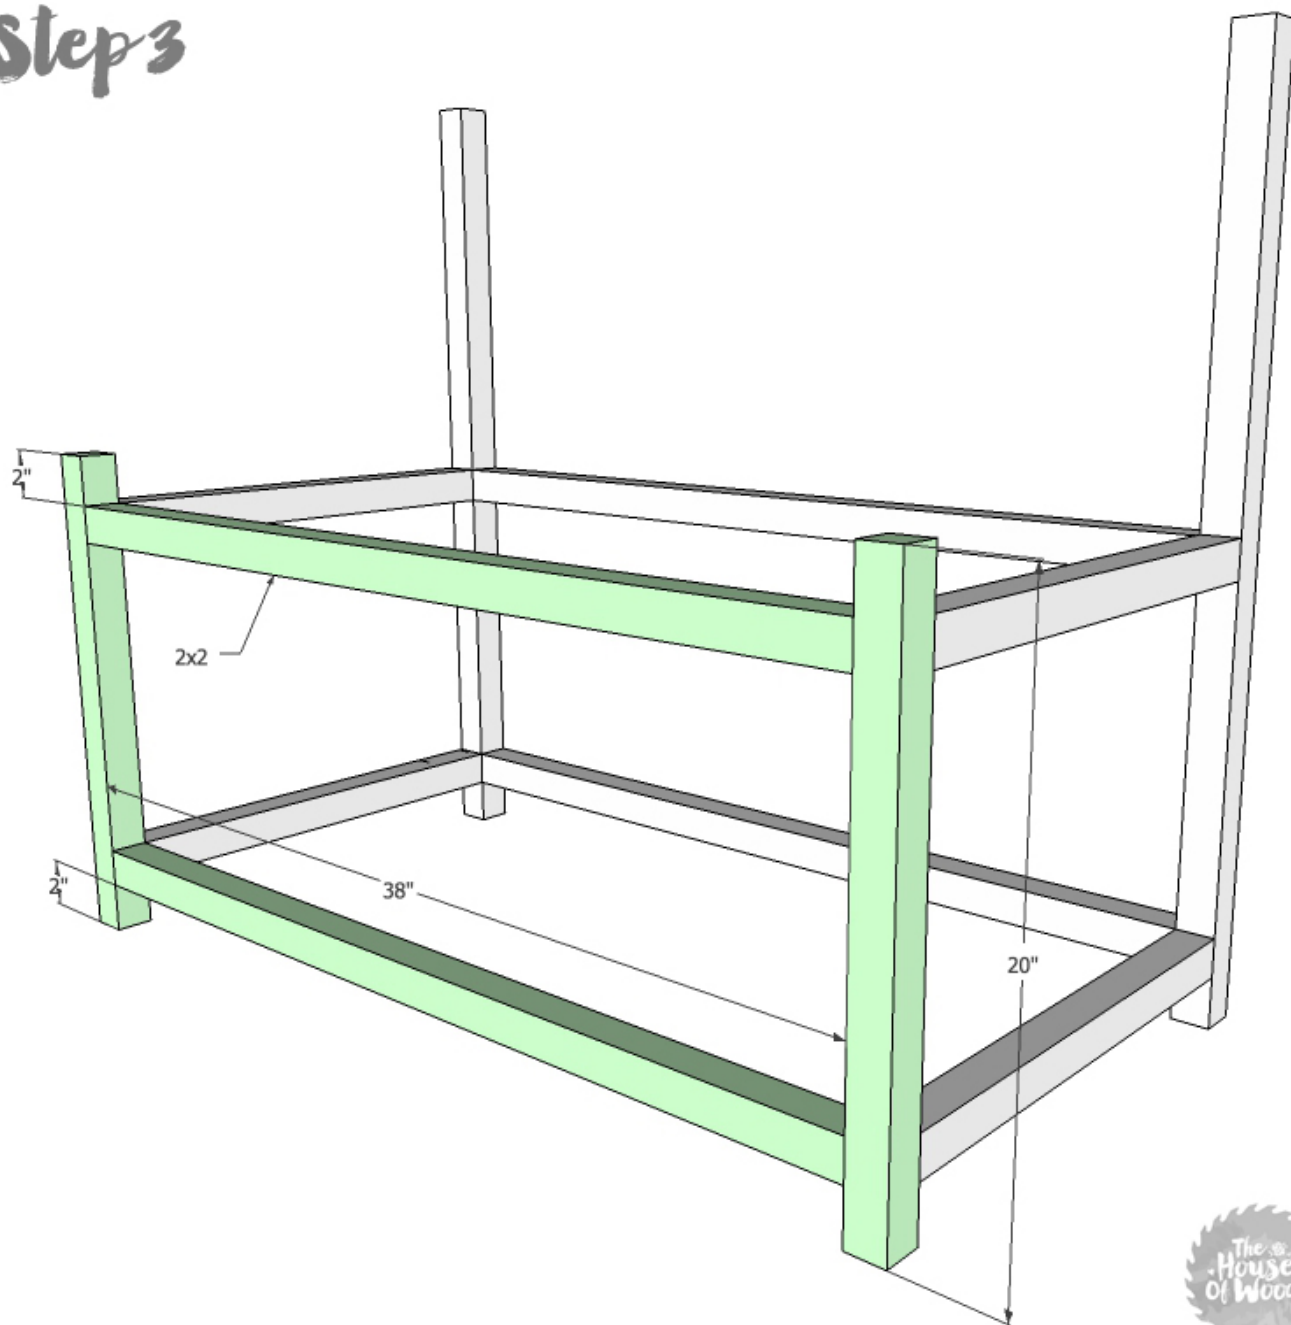
STEP 2

Drill 1 ½" pocket holes into rails and attach to back legs with 2 ½" pocket hole screws and glue.

Step 2

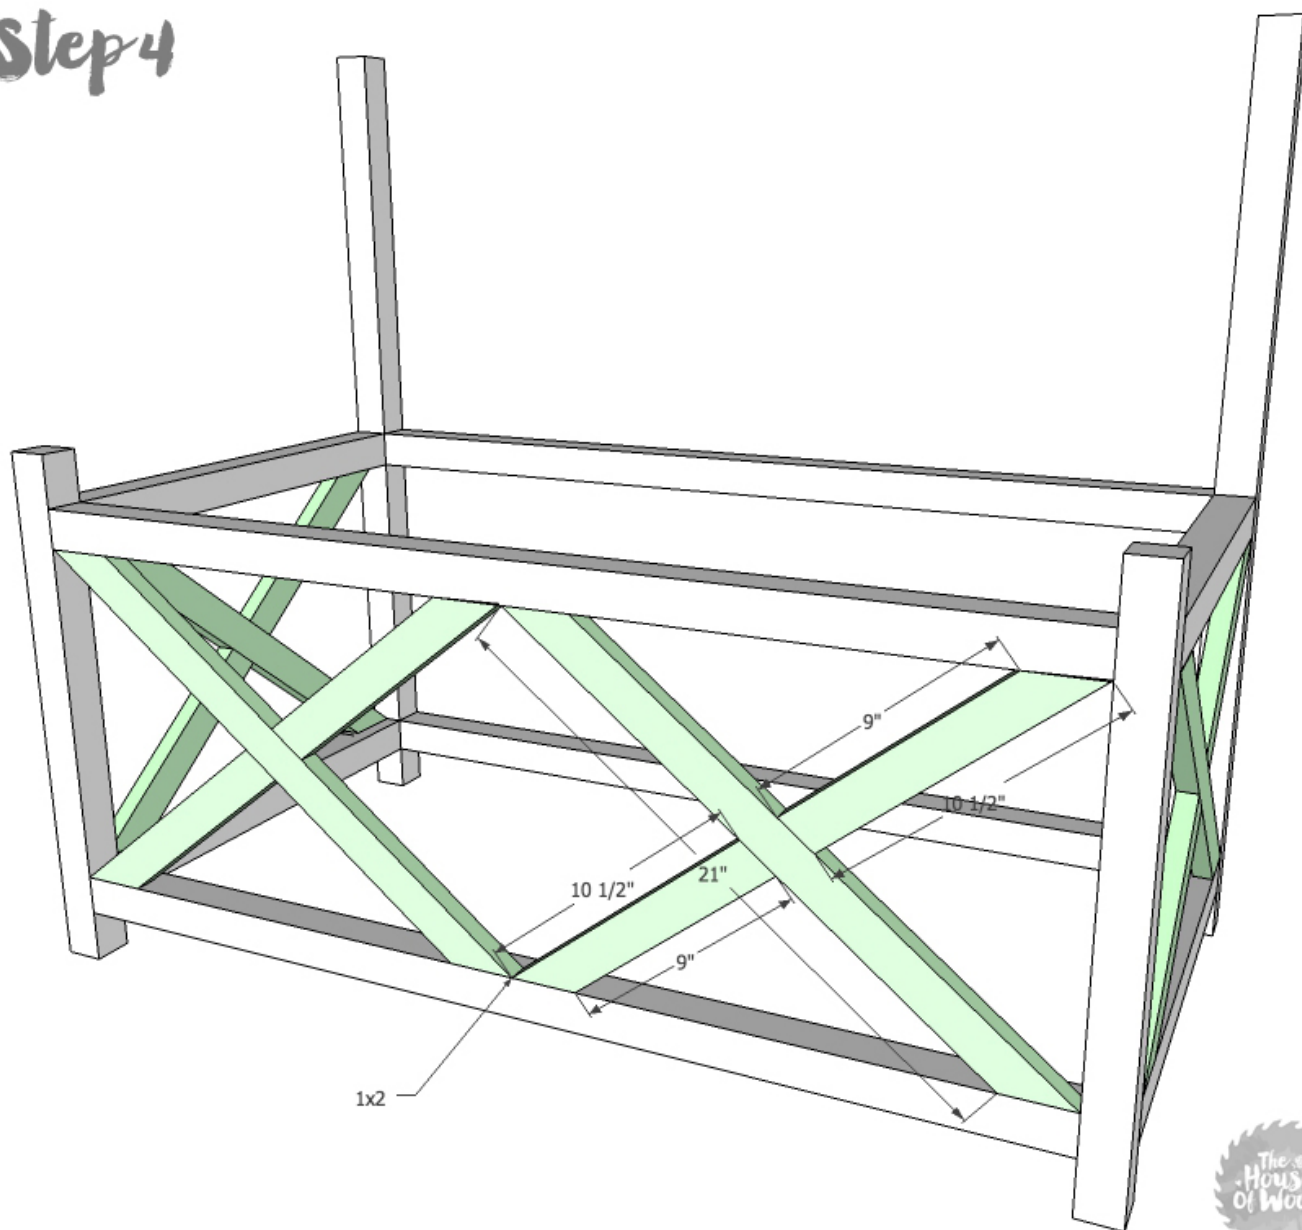
STEP 3

Build the carcass. Drill 1 ½" pocket holes into front rails and attach to front legs with 2 ½" pocket hole screws and glue. Then attach to the rest of the frame with 2 ½" pocket hole screws and glue.

Step 3

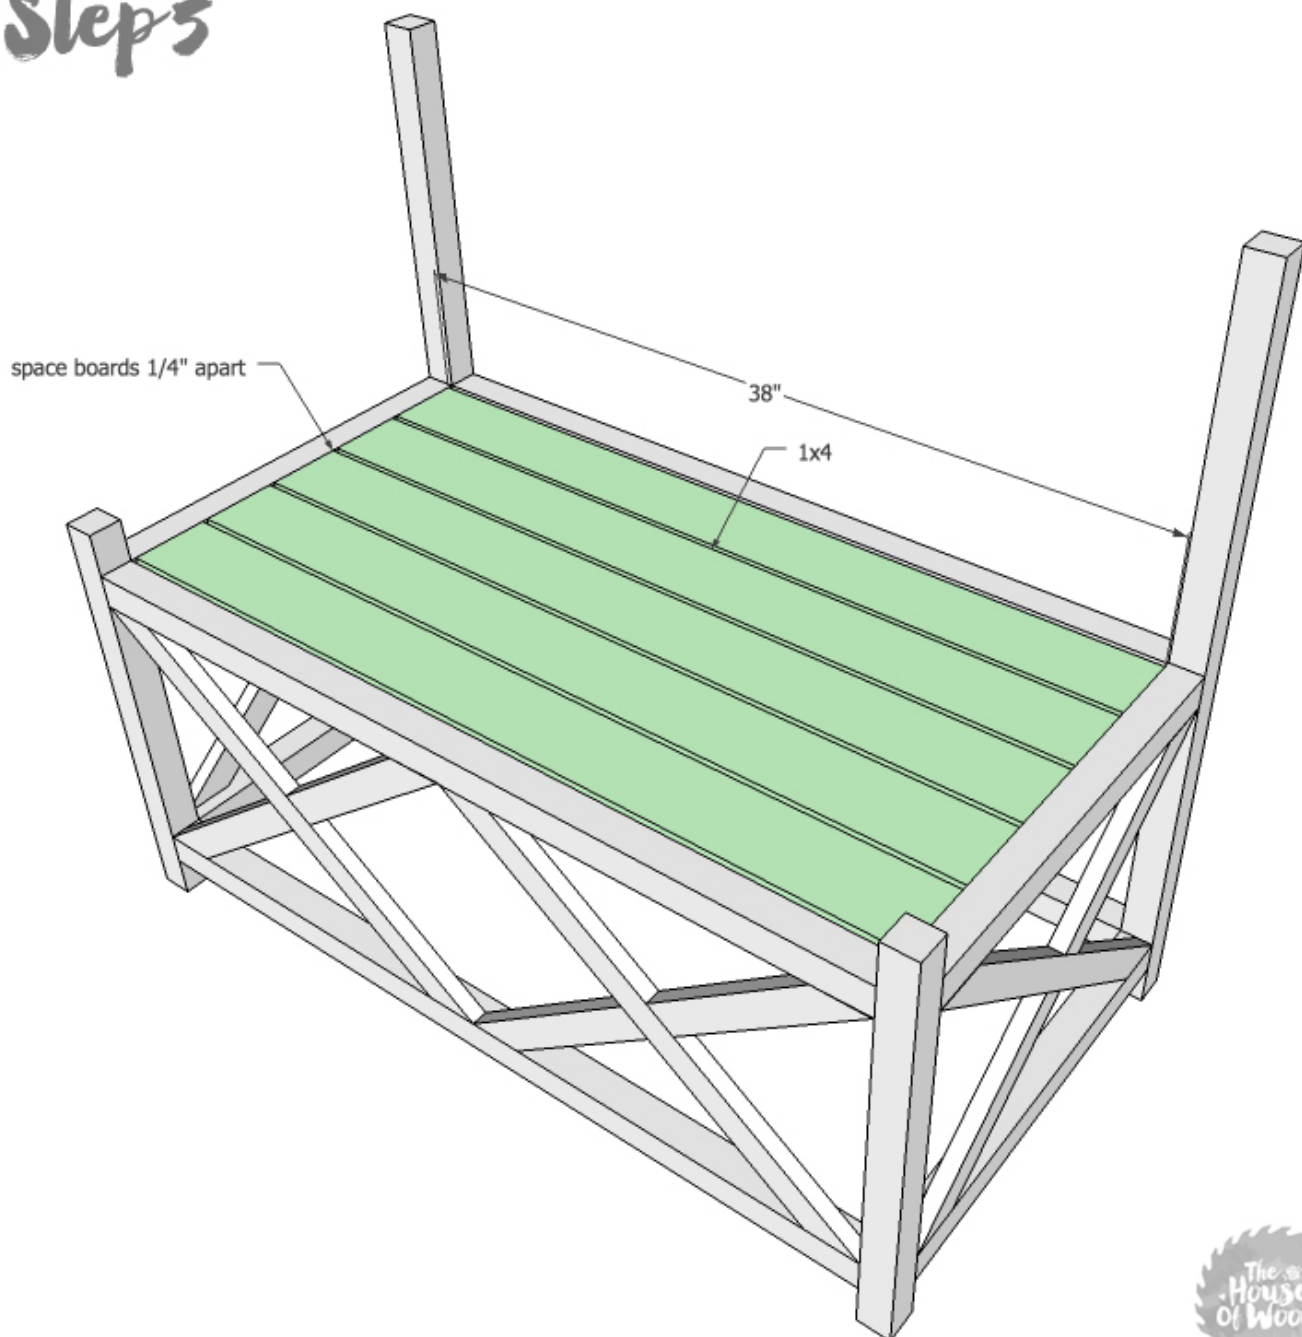
STEP 4

Attach the X pieces. For precision, I recommend marking the 1x2s in place, then cutting them based on your measurements. Use these measurements just as a loose guide. Drill $\frac{3}{4}$ " pocket holes and attach with $1\frac{1}{4}$ " pocket hole screws and glue.

Step 4

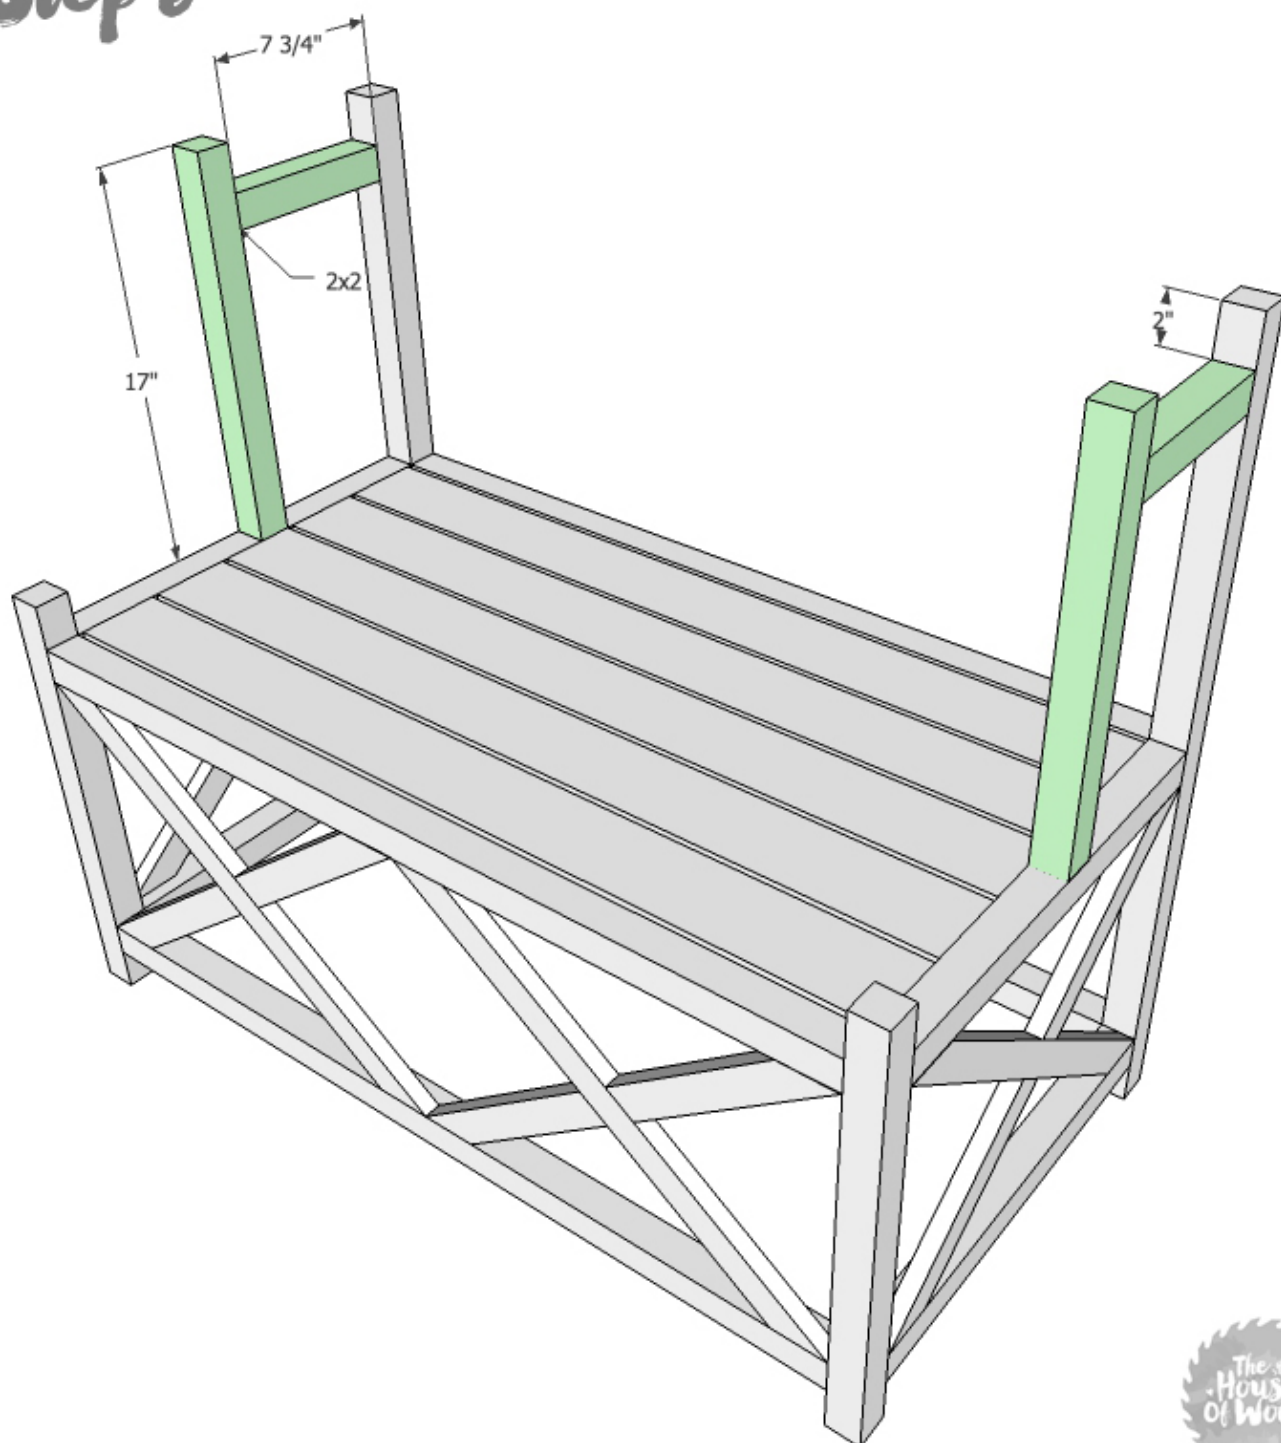
STEP 5

Drill $\frac{3}{4}$ " pocket holes into 1x4s and attach with 1 $\frac{1}{4}$ " pocket hole screws and glue. Space boards $\frac{1}{4}$ " apart.

Step 5

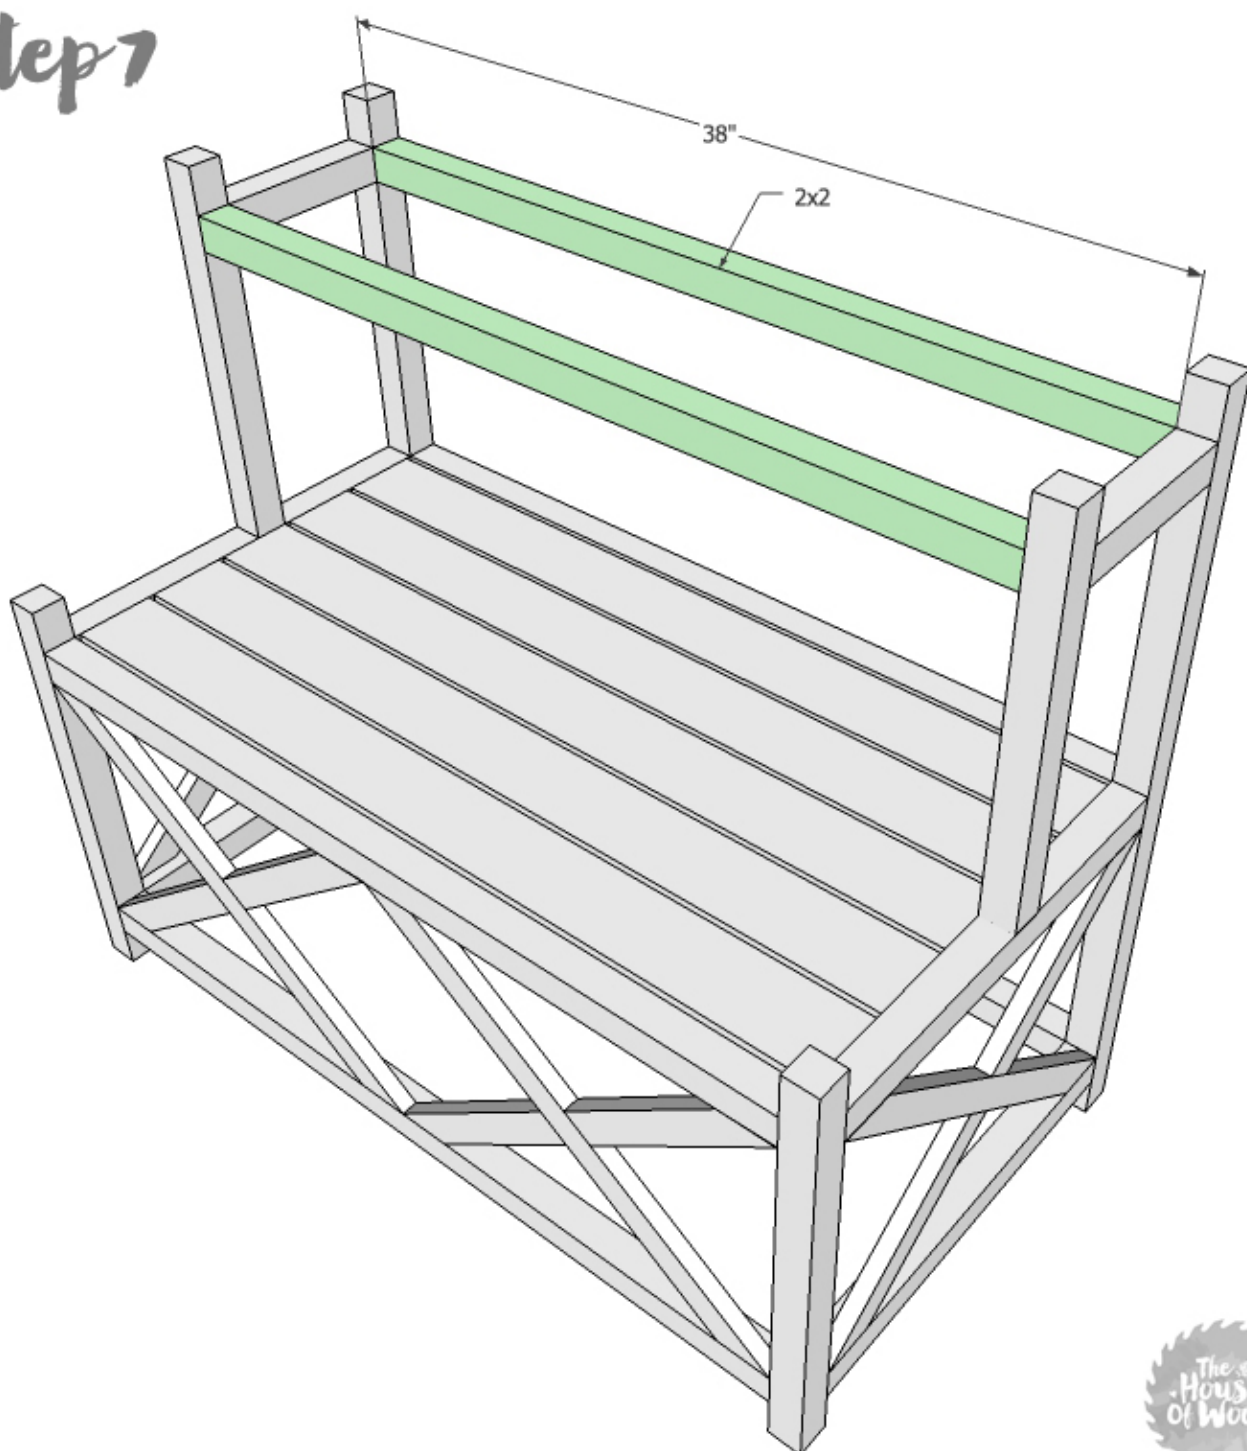
STEP 6

Drill 1 ½" pocket holes in the rails and stiles and attach to the rest of the frame with 2 ½" pocket hole screws and glue.

Step 6

STEP 7

Drill 1 ½" pocket holes into rails and attach with 2 ½" pocket hole screws and glue.

Step 7

STEP 8

Drill $\frac{3}{4}$ " pocket holes into 1x4s and attach with 1 $\frac{1}{4}$ " pocket hole screws and glue. Space boards $\frac{1}{4}$ " apart.

Step 8