

**MATERIALS:**

1 – Half Sheet of $\frac{3}{4}$ " Plywood
 1 – Half Sheet of $\frac{1}{4}$ " Plywood
 2 – 2x2x8'
 1 – 1x6x8'
 2 – 1x2x6'
 2 – 1x3x6'
 1 – 1x4x6'
 1 – 1x8x6'
6' of $\frac{3}{4}$ " Moulding
 1 – Knob
 1 – Set of 18" Drawer Slides
 $\frac{3}{4}$ " Iron-On Veneer Edging
 1 $\frac{1}{4}$ " Pocket Hole Screws
 $\frac{3}{4}$ " Brad Nails
 Wood Glue

TOOLS:

Miter Saw
 Circular Saw

CUT LIST:

4 – 2x2 @ 29 $\frac{1}{4}$ " (legs)
 2 – 1x6 @ 19 $\frac{1}{2}$ " (sides)
 1 – 1x6 @ 30 $\frac{3}{4}$ " (back)
 2 – 1x2 @ 30 $\frac{3}{4}$ " (front trim/back stretcher)
 2 – 1x2 @ 19 $\frac{1}{2}$ " (side stretchers)
 1 – $\frac{3}{4}$ " plywood @ 34 $\frac{3}{4}$ " x 23 $\frac{1}{2}$ " (top)

DRAWER:


2 – 1x3 @ 29 $\frac{1}{2}$ " (front/back)
 2 – 1x3 @ 17" (sides)
 1 – $\frac{1}{4}$ " plywood @ 29 $\frac{1}{2}$ " x 18 $\frac{1}{2}$ " (bottom)
 1 – 1x4 @ 30 $\frac{1}{2}$ " (face)
 2 – $\frac{3}{4}$ " Moulding @ 30 $\frac{1}{2}$ " (long point to long point)
 2 – $\frac{3}{4}$ " Moulding @ 3 $\frac{1}{2}$ " (long point to long point)

HUTCH:


2 – 1x8 @ 22" (sides)
 2 – 1x4 @ 9" (bottom dividers)
 1 – $\frac{3}{4}$ " plywood @ 32 $\frac{1}{4}$ " x 9" (shelf)

Jigsaw	2 – 1x3 @ 9" (top dividers)
Drill	1 – ¾" plywood @ 32 ¼" x 9" (top)
Right Angle Drill	1 – ¼" plywood @ 33 ¾" x 7 ½" (back)
Kreg Jig	
Kreg Rip-Cut	
Hammer or Brad Nailer	
Countersink Drill Bit	
Tape Measure	
Speed Square	
Pencil	
Hearing Protection	
Safety Glasses	


DIMENSIONS

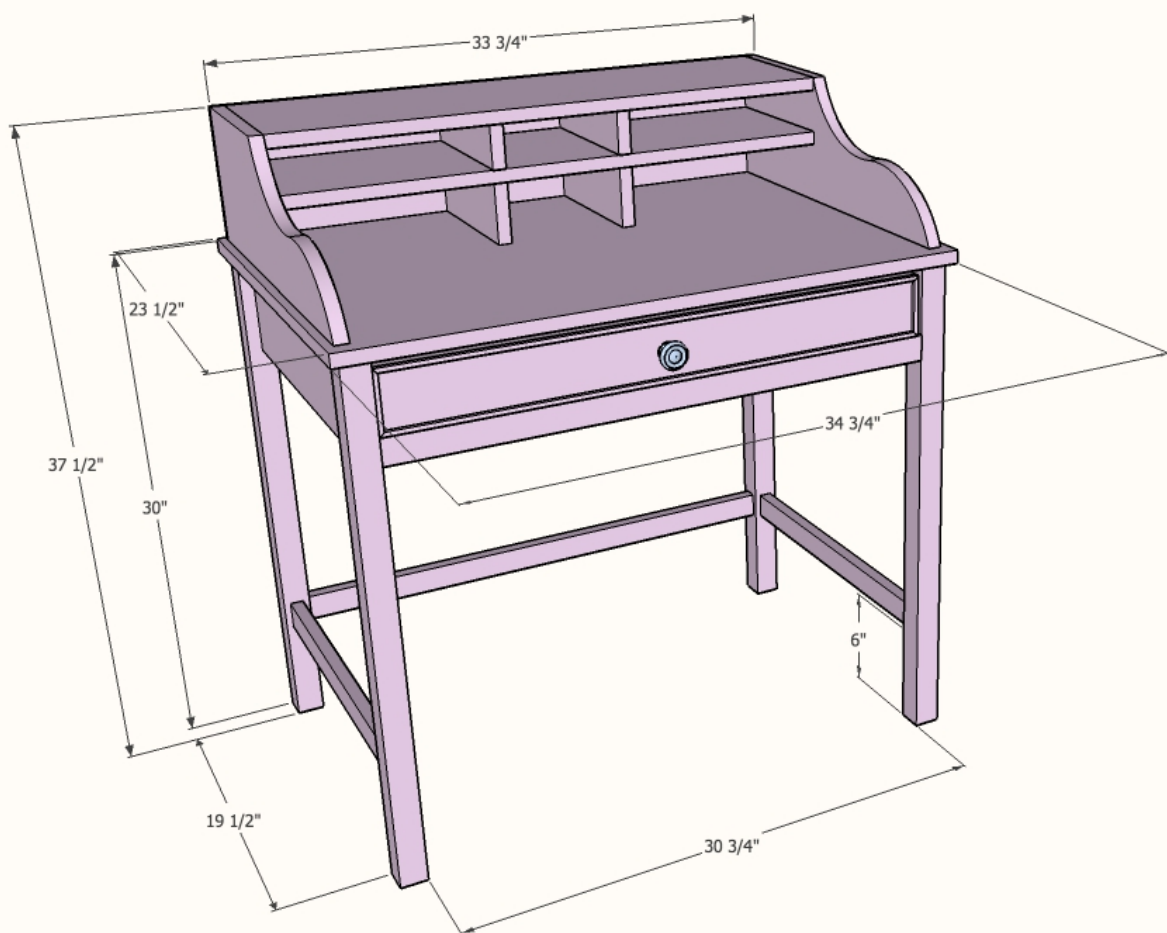


STEP 1 – BUILD TWO SIDES

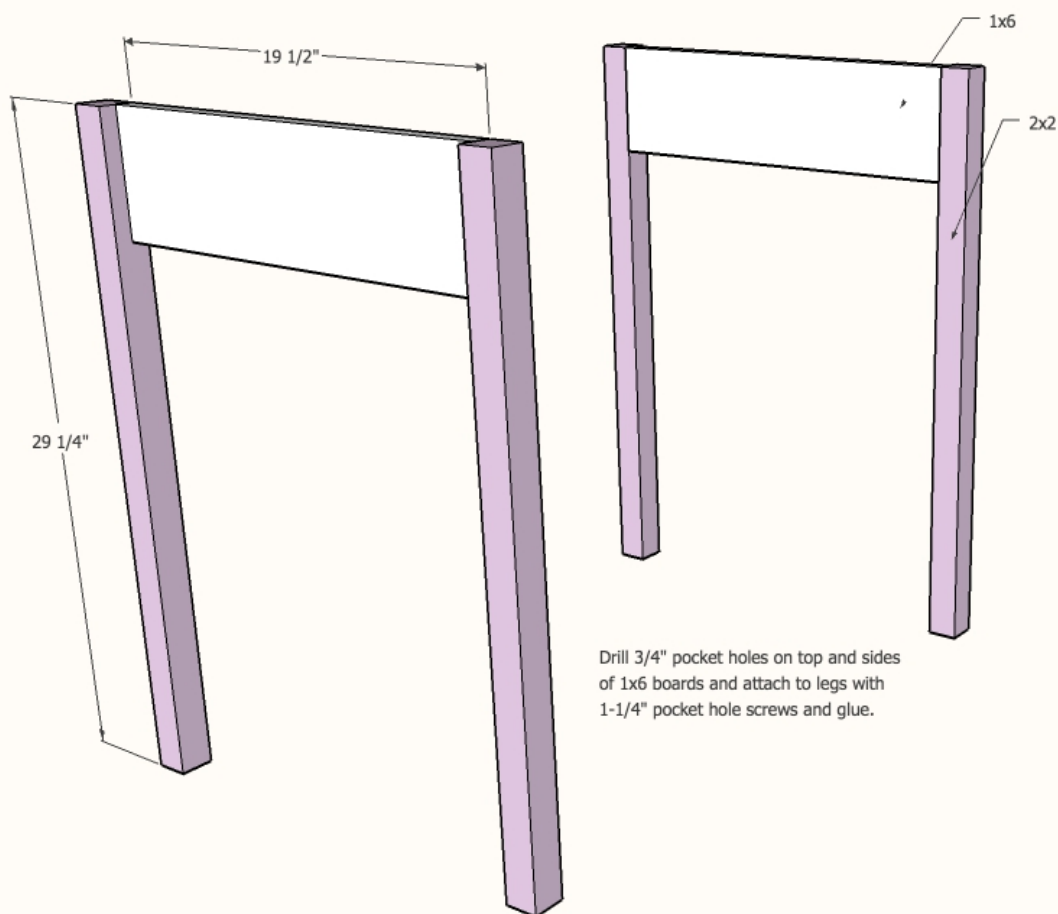


STEP 2 – BUILD CARCASS

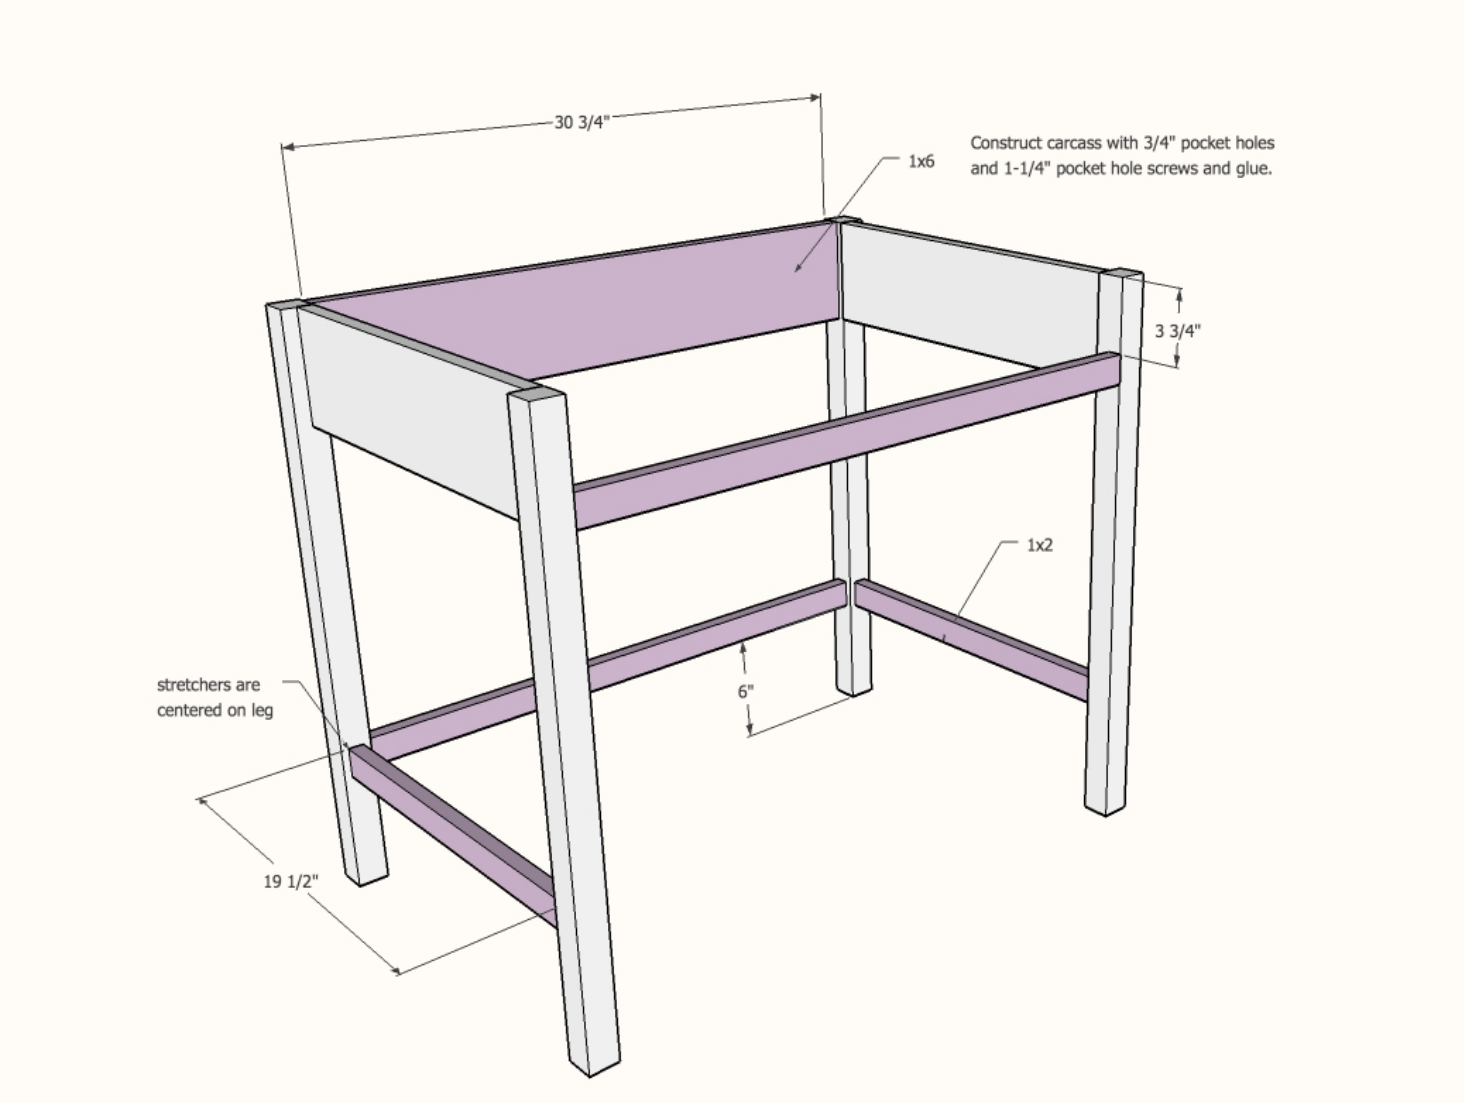


STEP 3 – BUILD DRAWER BOX

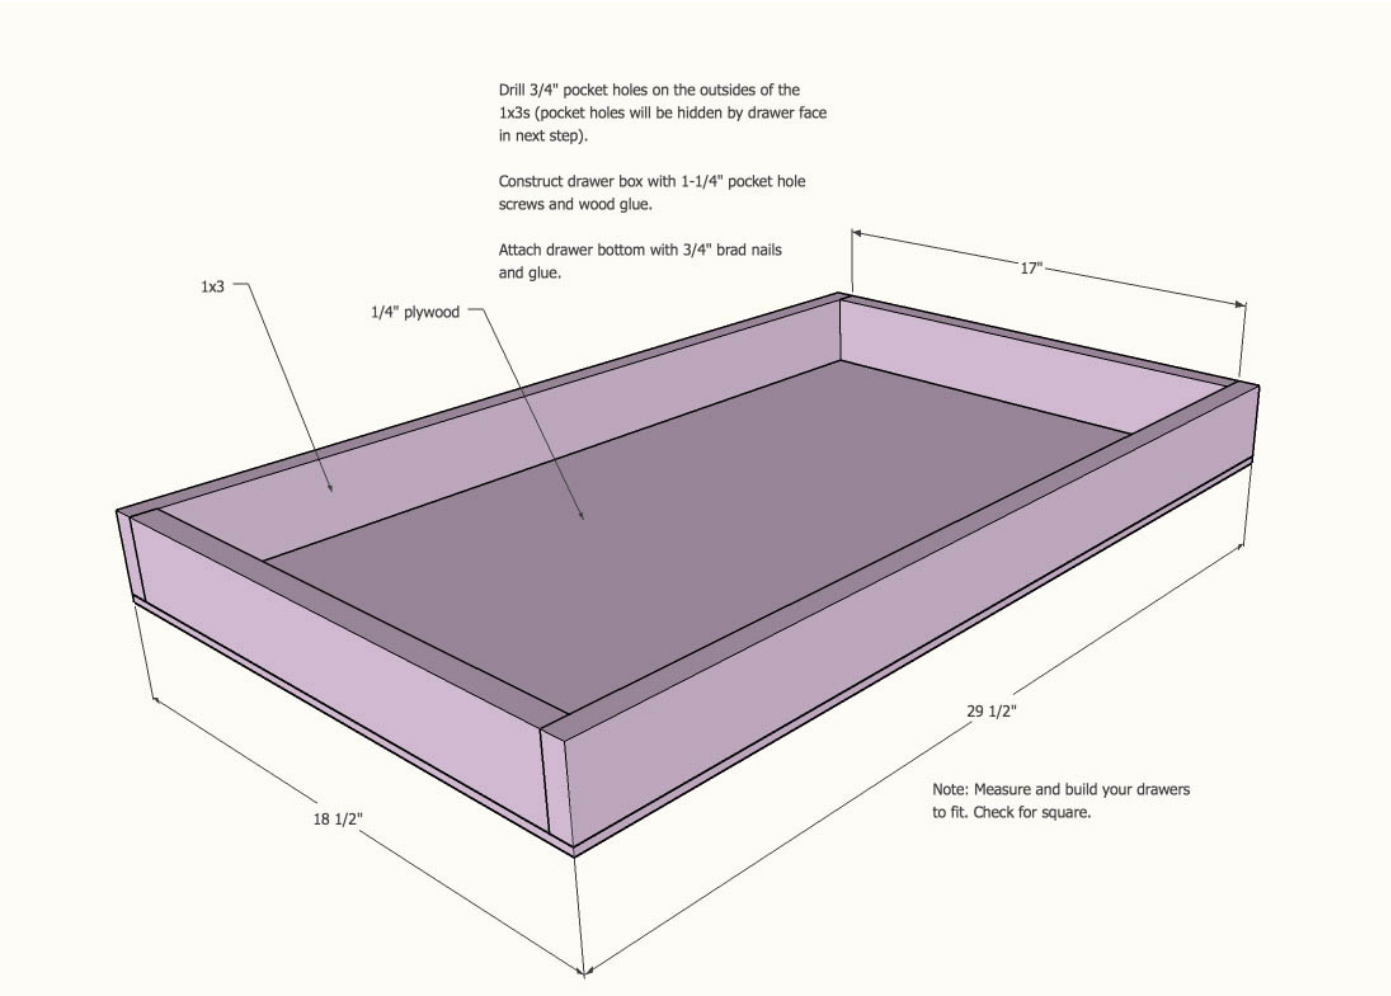


STEP 4 – ATTACH DRAWER FACE

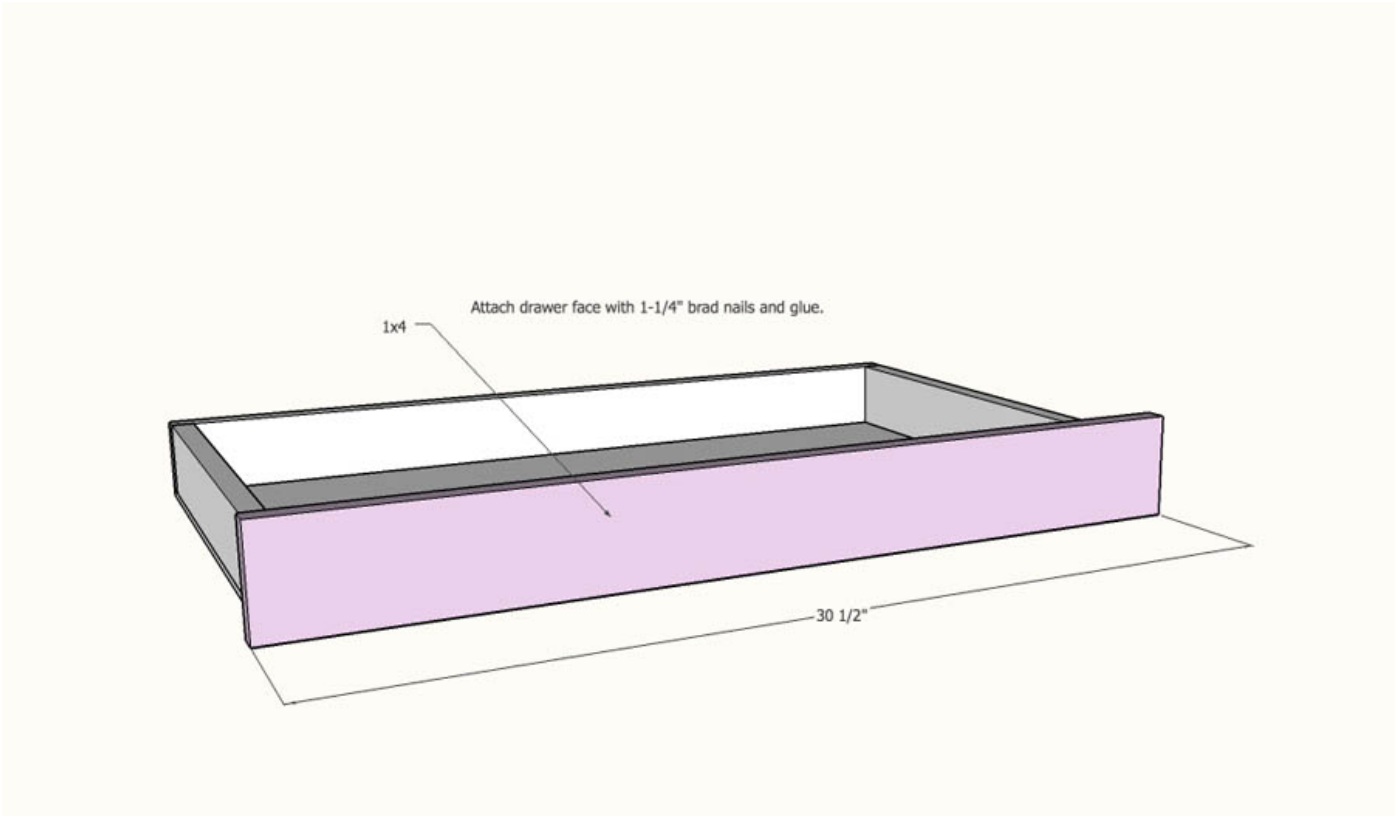


STEP 5 – ATTACH TRIM AND INSTALL KNOB

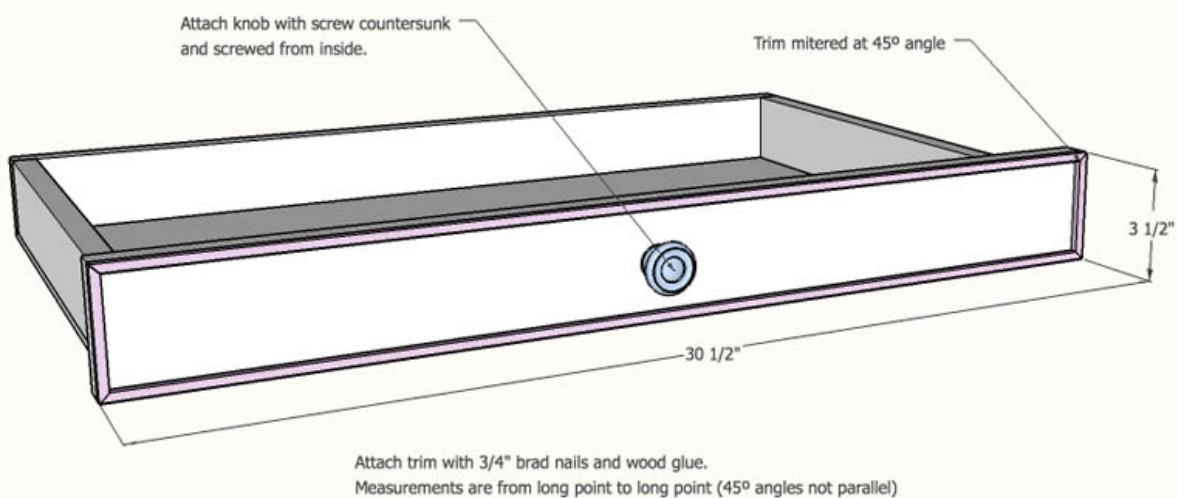


STEP 6 – INSTALL DRAWER SLIDES

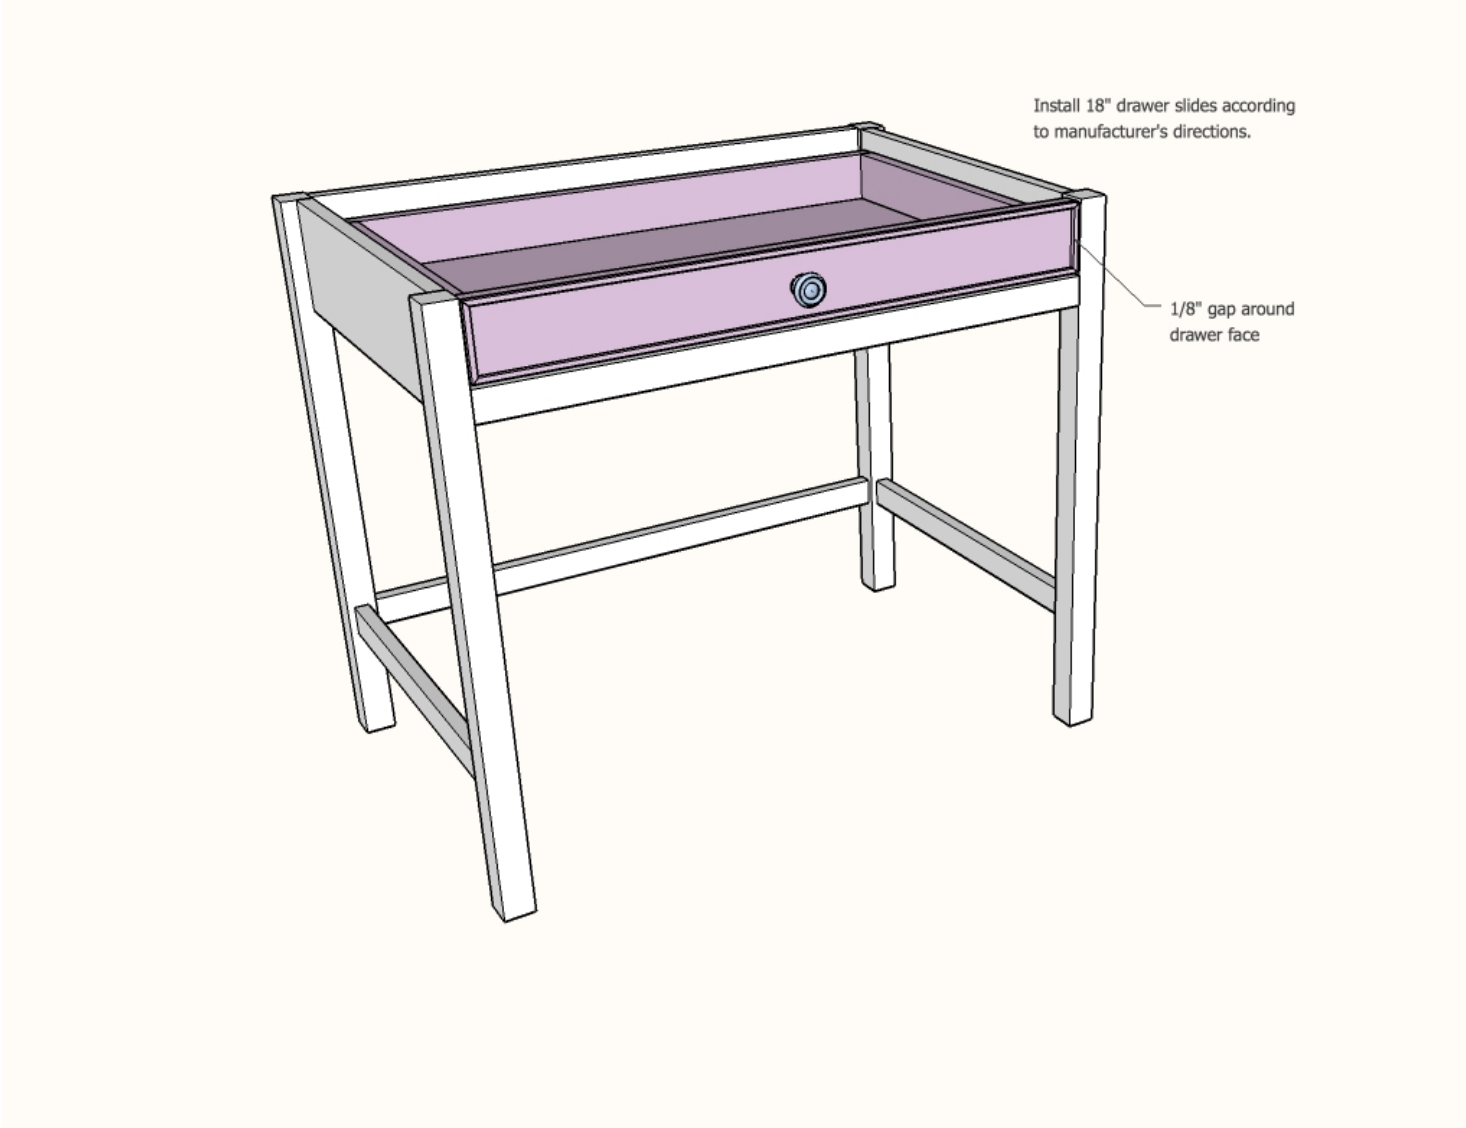


STEP 7 – ATTACH TOP

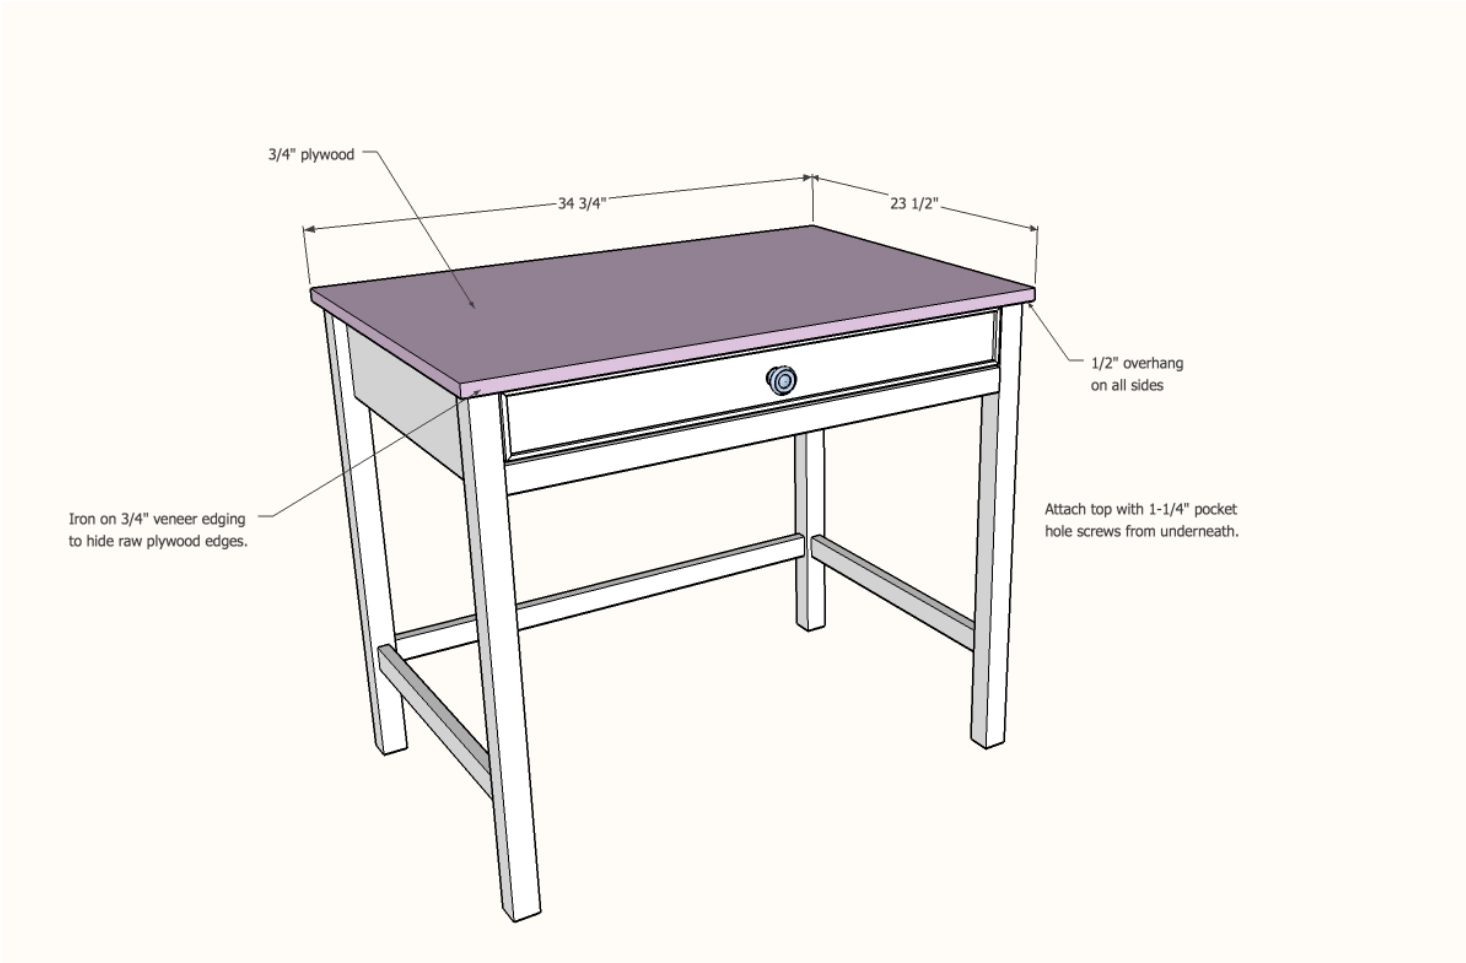


STEP 8 – CUT CURVED SIDES

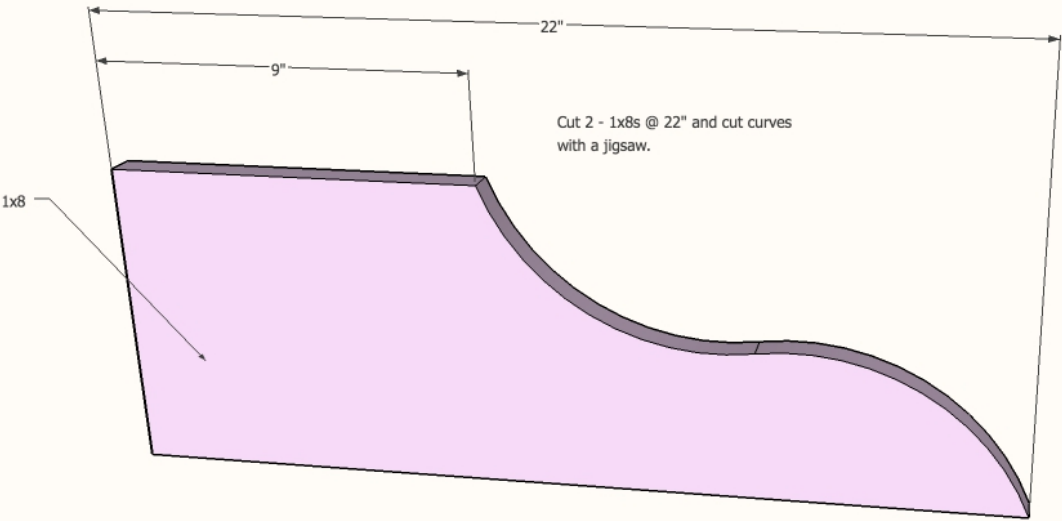


STEP 9 – ATTACH HUTCH SIDES

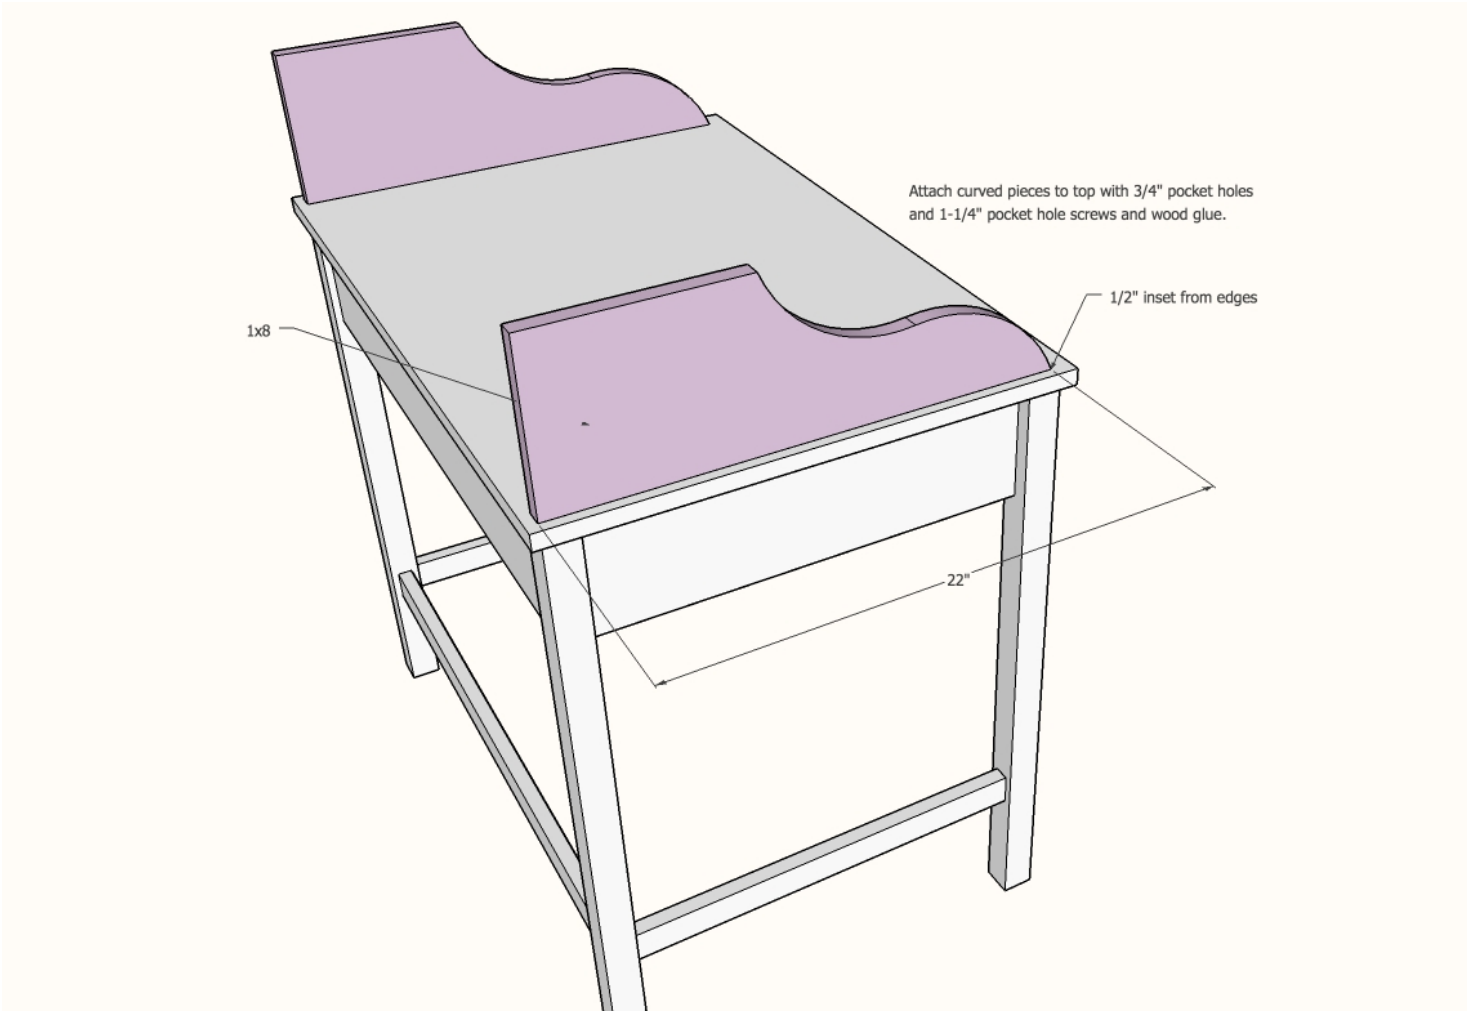

STEP 10 – ATTACH BOTTOM DIVIDERS

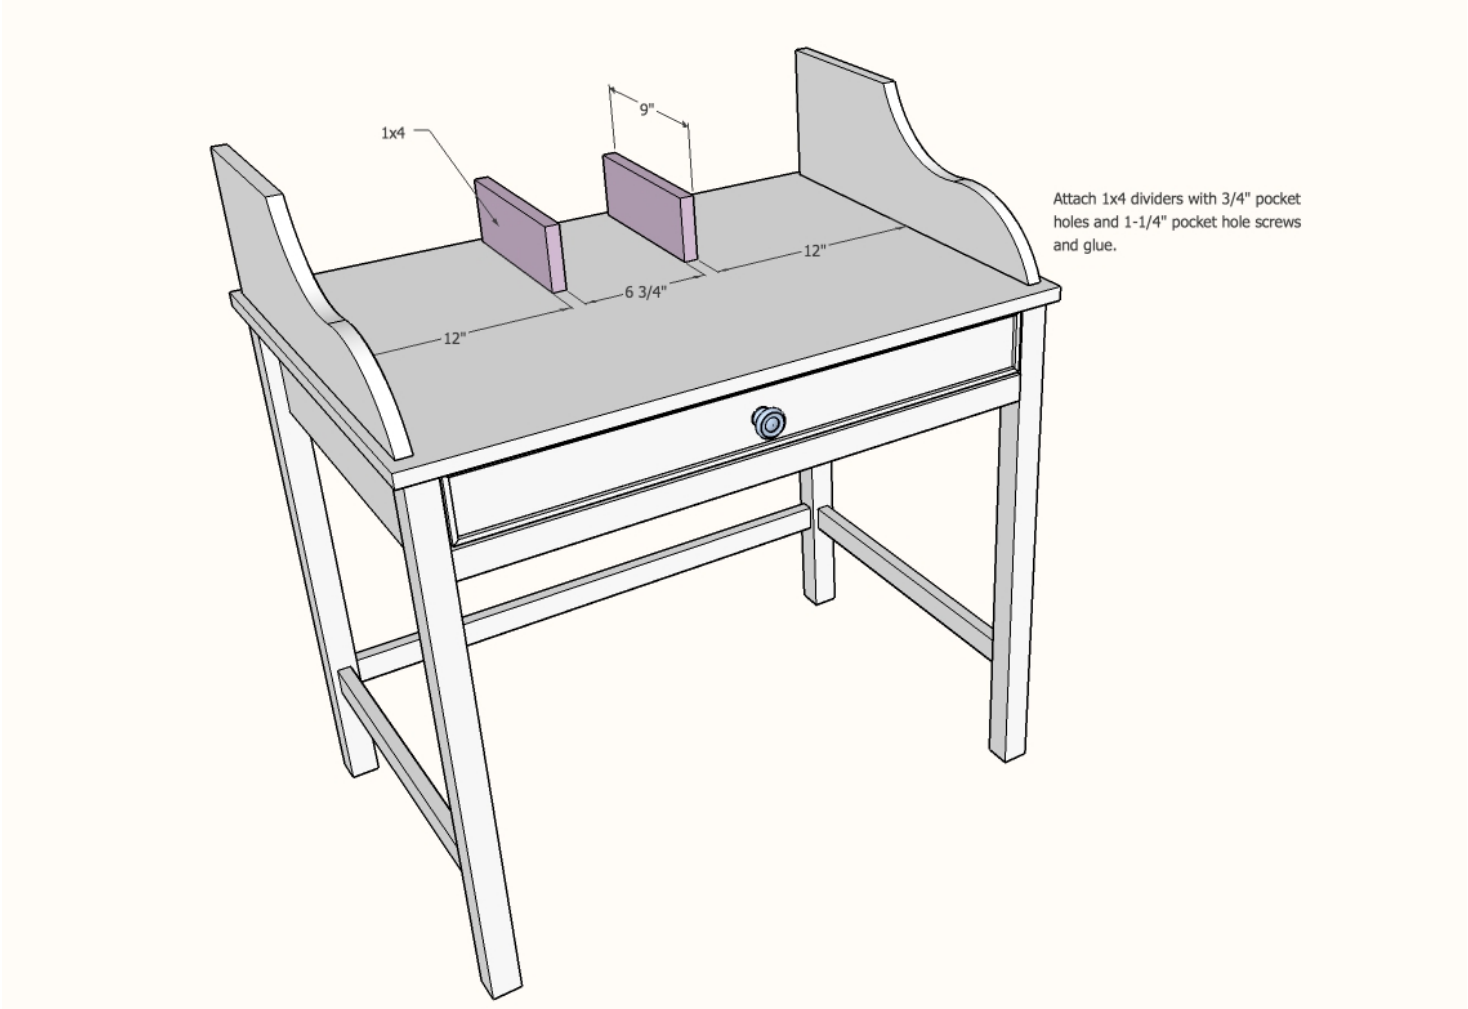


STEP 11 – ATTACH HUTCH SHELF

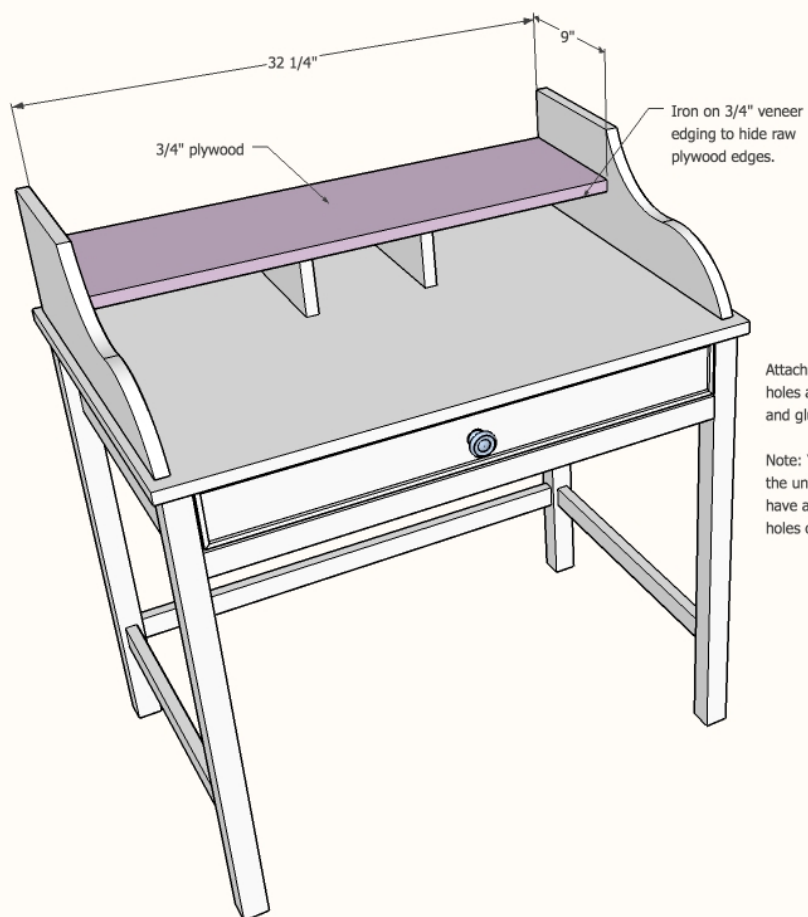


Attach hutch shelf with 3/4" pocket holes and 1-1/4" pocket hole screws and glue.

Note: You can hide the pocket holes on the underside of the shelf as long as you have a right angle drill. If not, drill the holes on the top and fill with wood filler.

STEP 12 – ATTACH TOP DIVIDERS

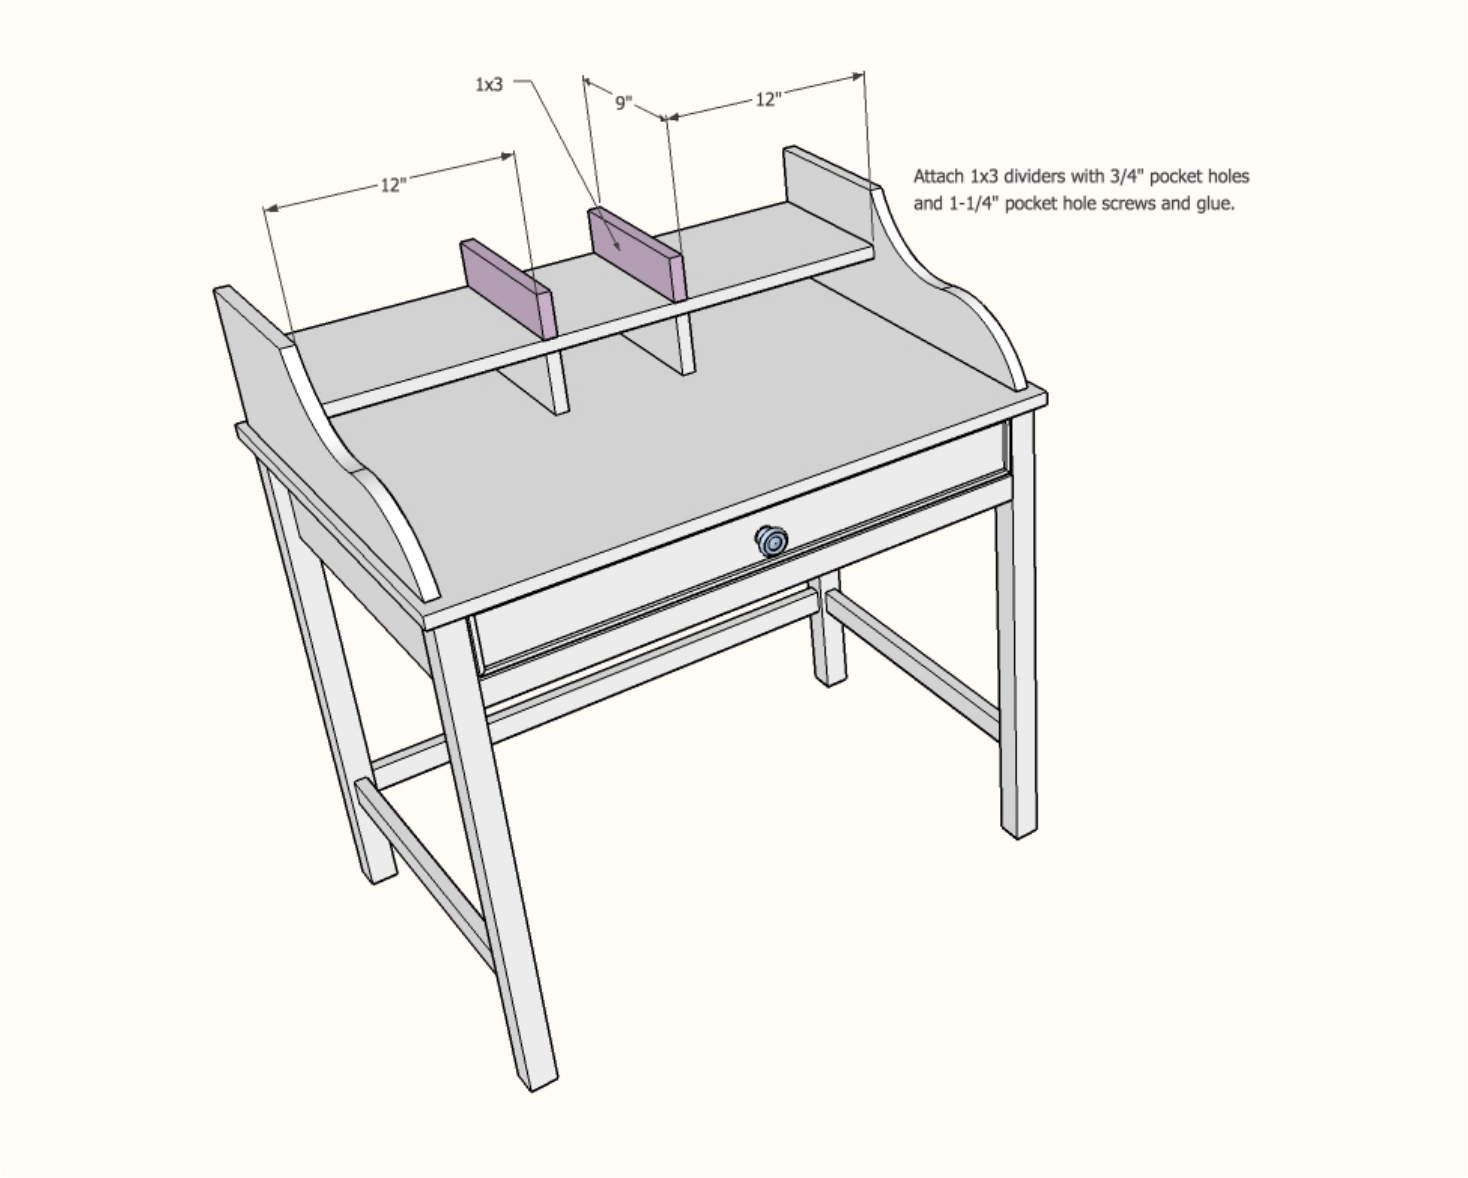

STEP 13 – ATTACH HUTCH TOP

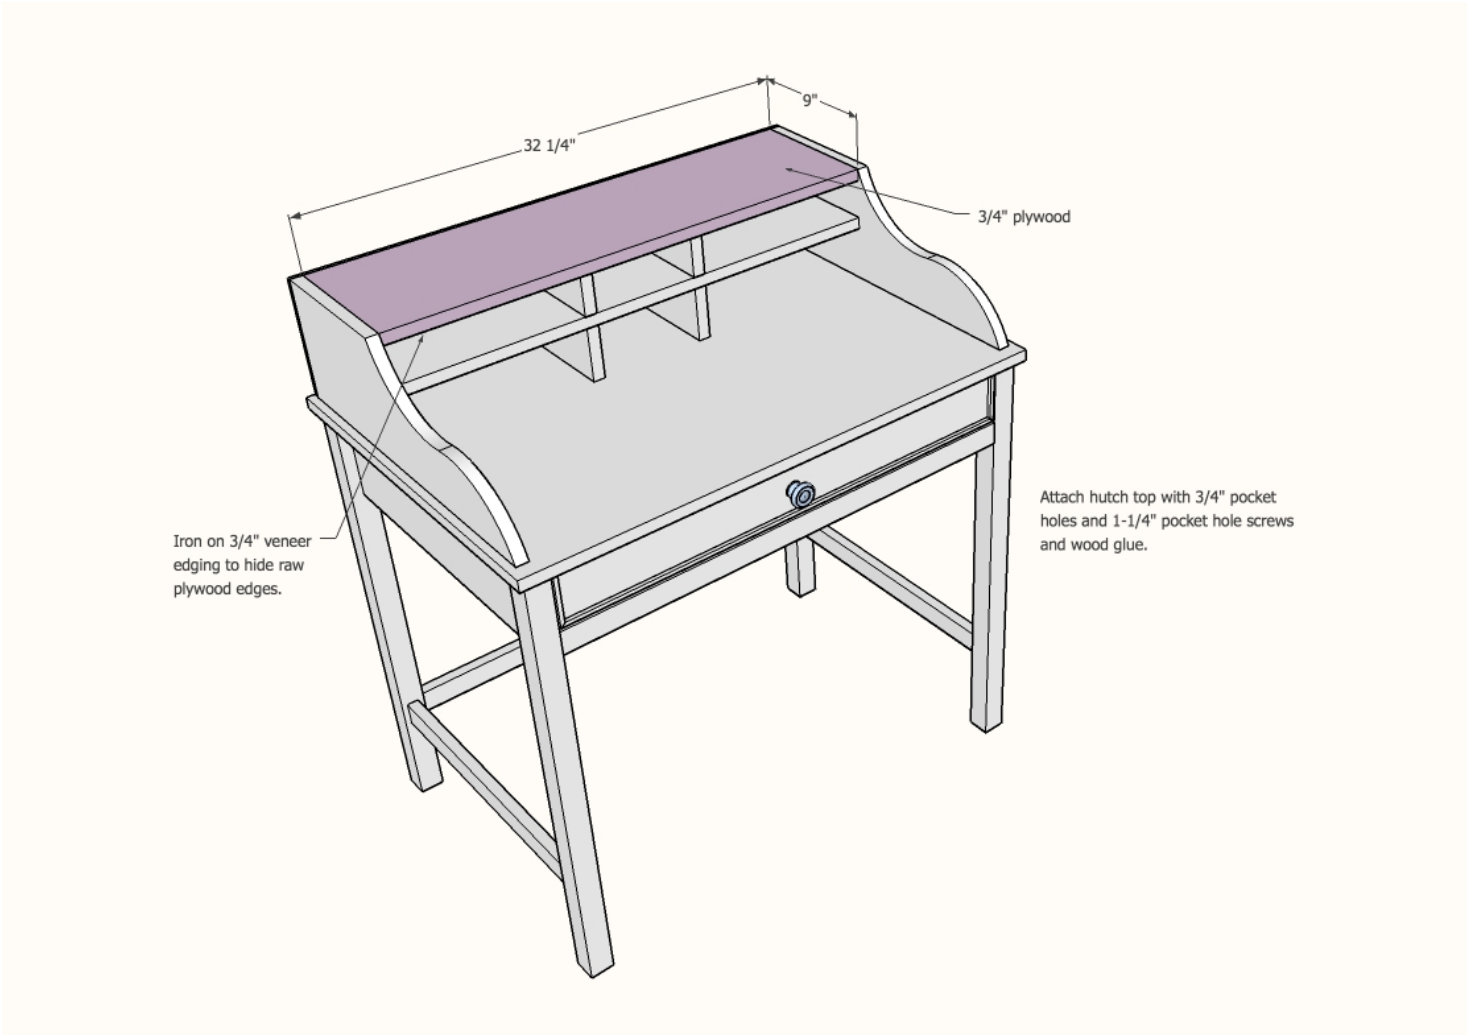

STEP 14 – ATTACH HUTCH BACK PANEL

