

**MATERIALS:**

1 – 2x2x10'
 1 – 1x6x8'
 1 – Sheet of 3/4" Plywood
 19 3/4" of 2x4
 2 – 1x3x8'
 1 – 1/2 Sheet of 1/4" Plywood
 1 – 1x4x6'
 1 – 1x2x6'
 2 – Sets of 16" Drawer Slides
 2 – Drawer Knobs or Pulls
 Iron-On 3/4" Veneer Edging
 2 1/2" Pocket Hole Screws
 1 1/4" Pocket Hole Screws
 1 1/4" Brad Nails
 3/4" Brad Nails
 Wood Glue

CUT LIST:

4 – 2x2 @ 29 1/4" (legs)
 2 – 1x6 @ 19" (sides)
 1 – 1x6 @ 55" (back)
 1 – 3/4" plywood @ 60" x 24" (top)
 1 – 2x4 @ 19 3/4" (divider)
 1 – 1x2 @ 55" (front trim)
 1 – 1x2 @ 3 3/4" (divider trim)

DRAWERS (2):

4 – 1x3 @ 24 1/4" (front/back)
 4 – 1x3 @ 17 3/4" (sides)
 2 – 1/4" plywood @ 25 3/4" x 17 3/4" (bottom)
 2 – 1x4 @ 26 1/2" (face)

TOOLS:

Tape Measure

Pencil

Circular Saw

Kreg Rip-Cut

Safety Glasses


Speed Square

Drill

Kreg Jig


Brad Nailer or Hammer

Hearing Protection

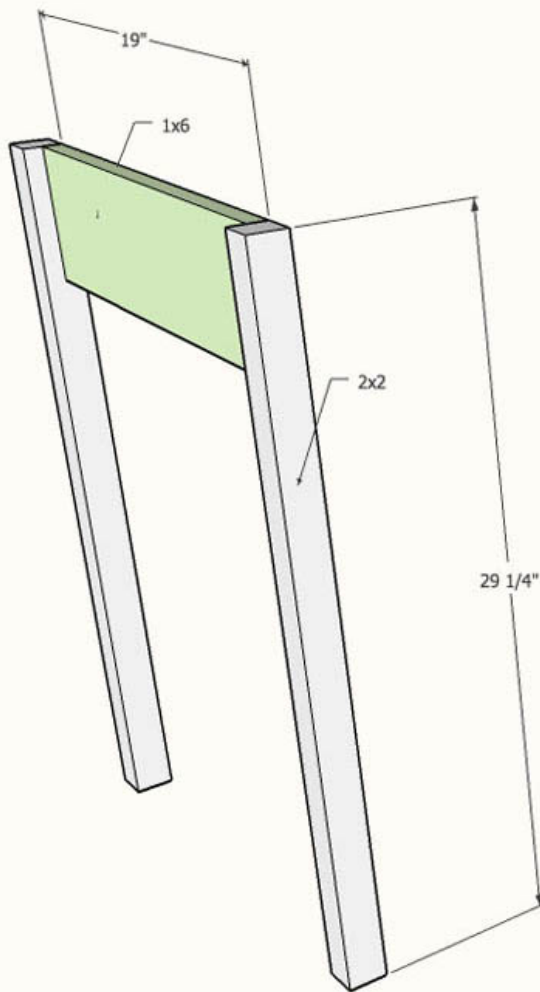
Step 1 - Build two sides

Construct sides with 3/4" pocket holes and 1-1/4" pocket hole screws and glue. Attach 1x6 flush to the insides of the legs.

Be sure to drill 3/4" pocket holes facing up to attach top in later steps.

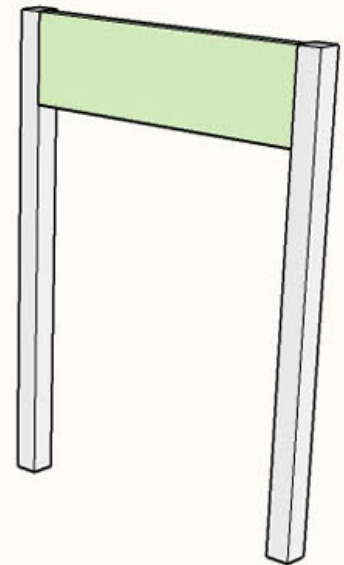


Step 2 – Construct carcass

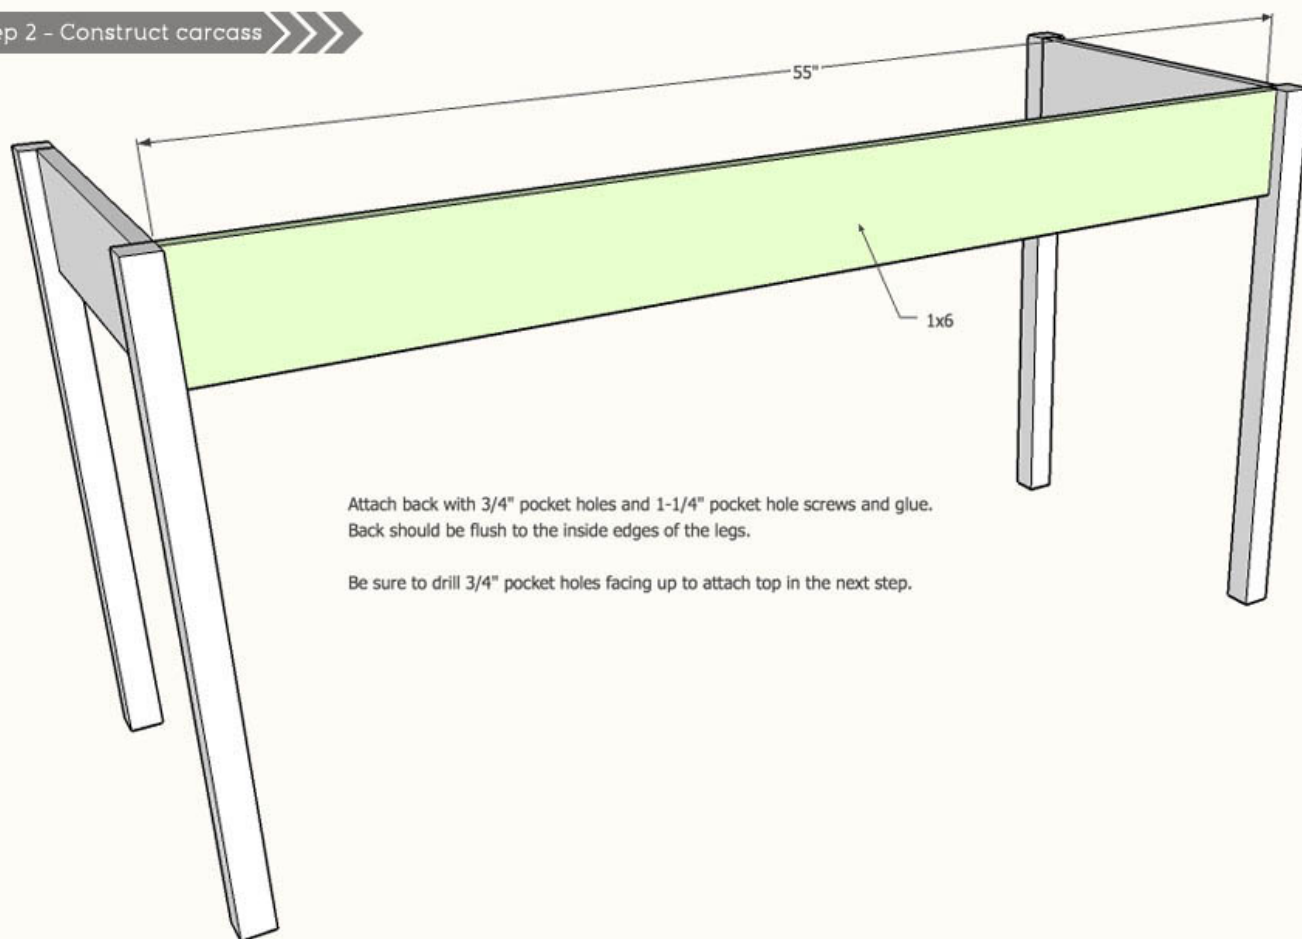


Attach back with 3/4" pocket holes and 1-1/4" pocket hole screws and glue.
Back should be flush to the inside edges of the legs.


Be sure to drill 3/4" pocket holes facing up to attach top in the next step.

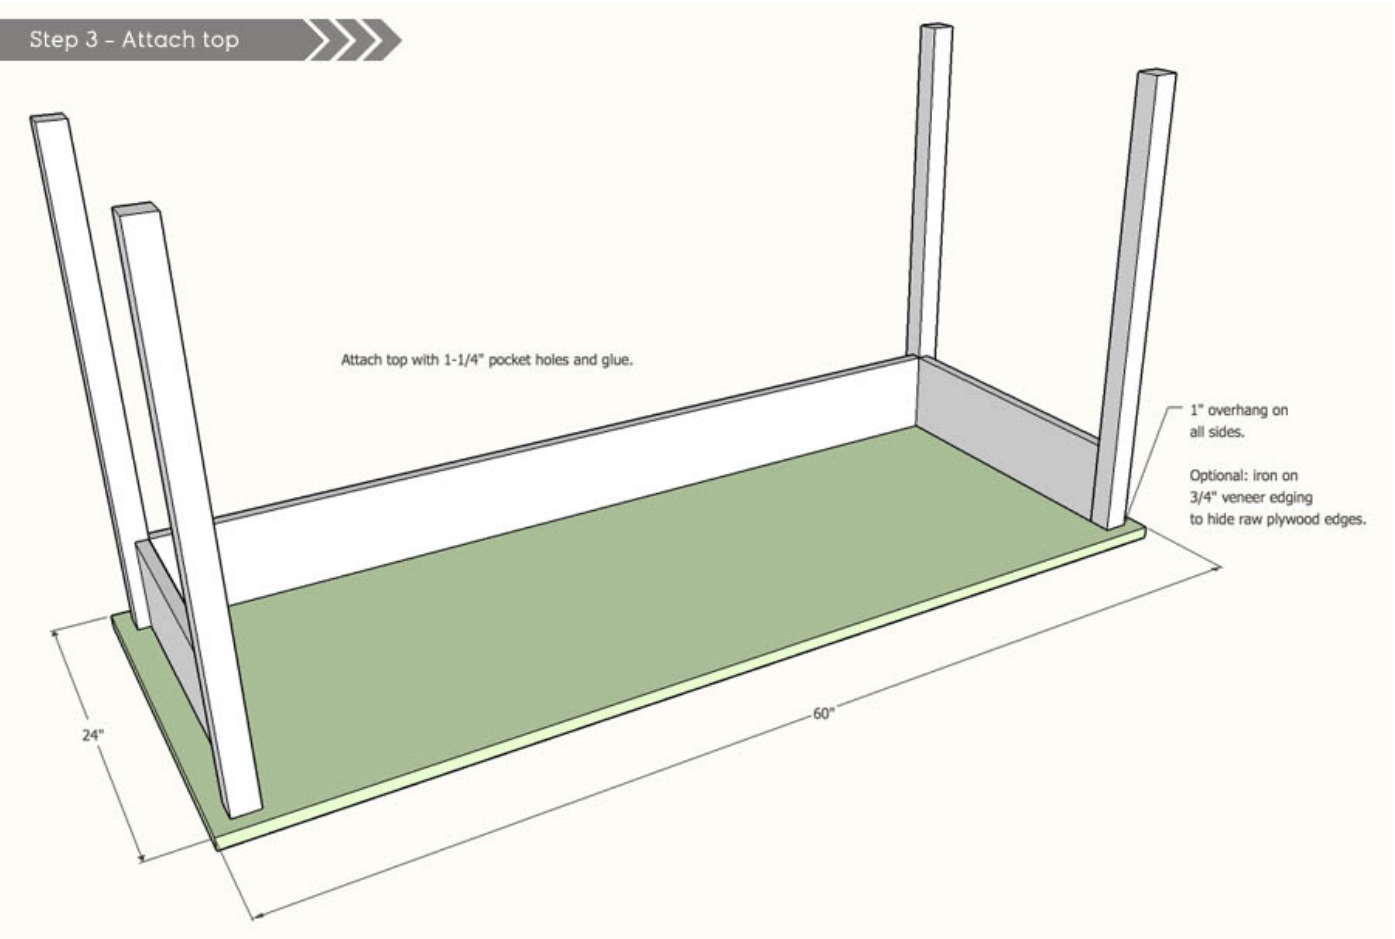


Step 4 - Attach divider

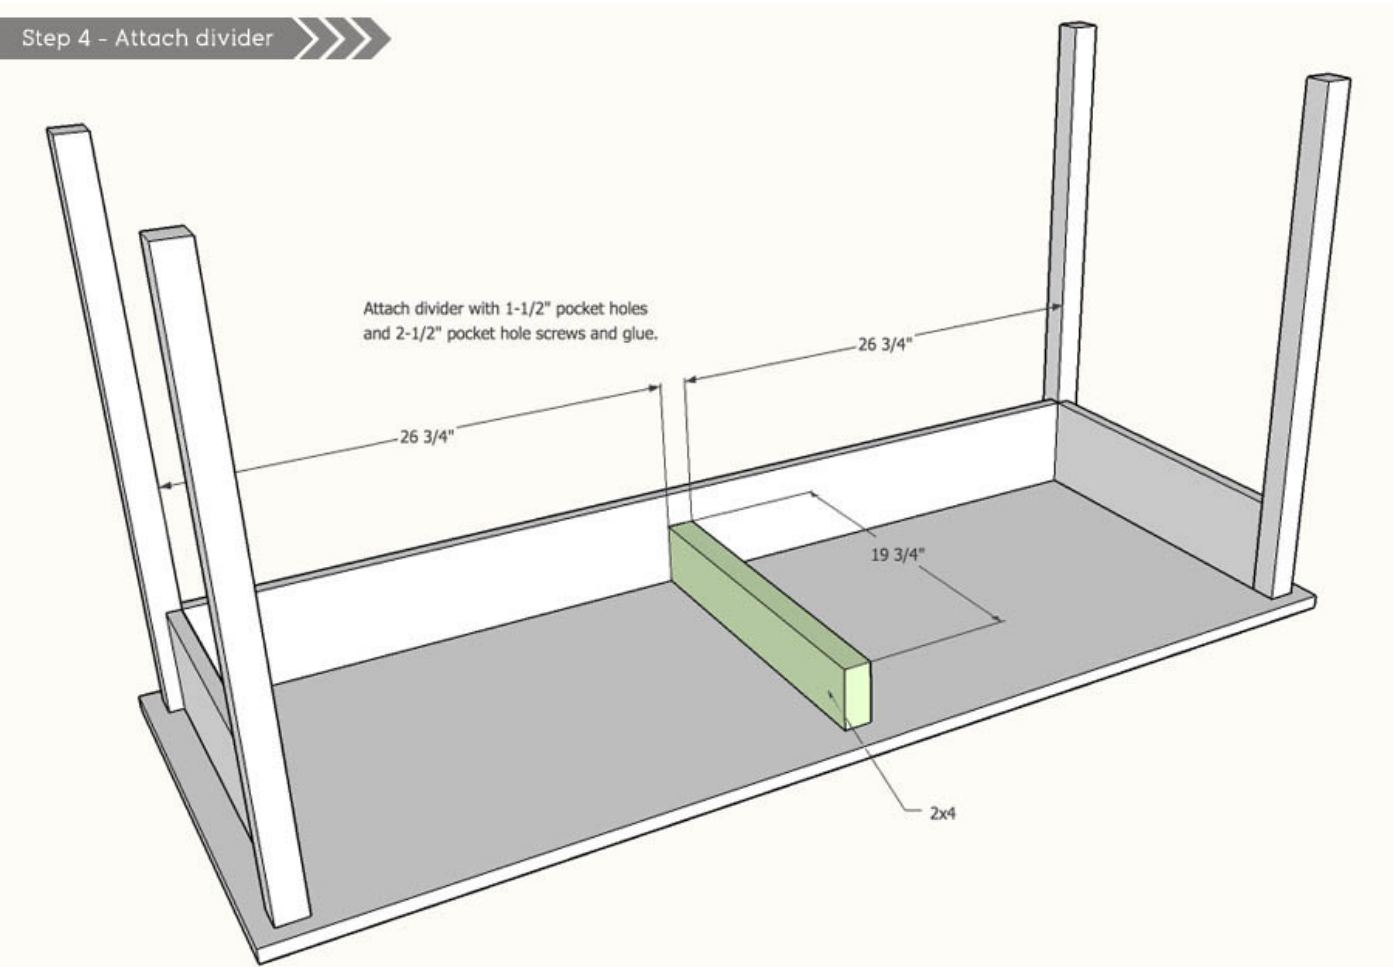


Step 5 - Build drawers

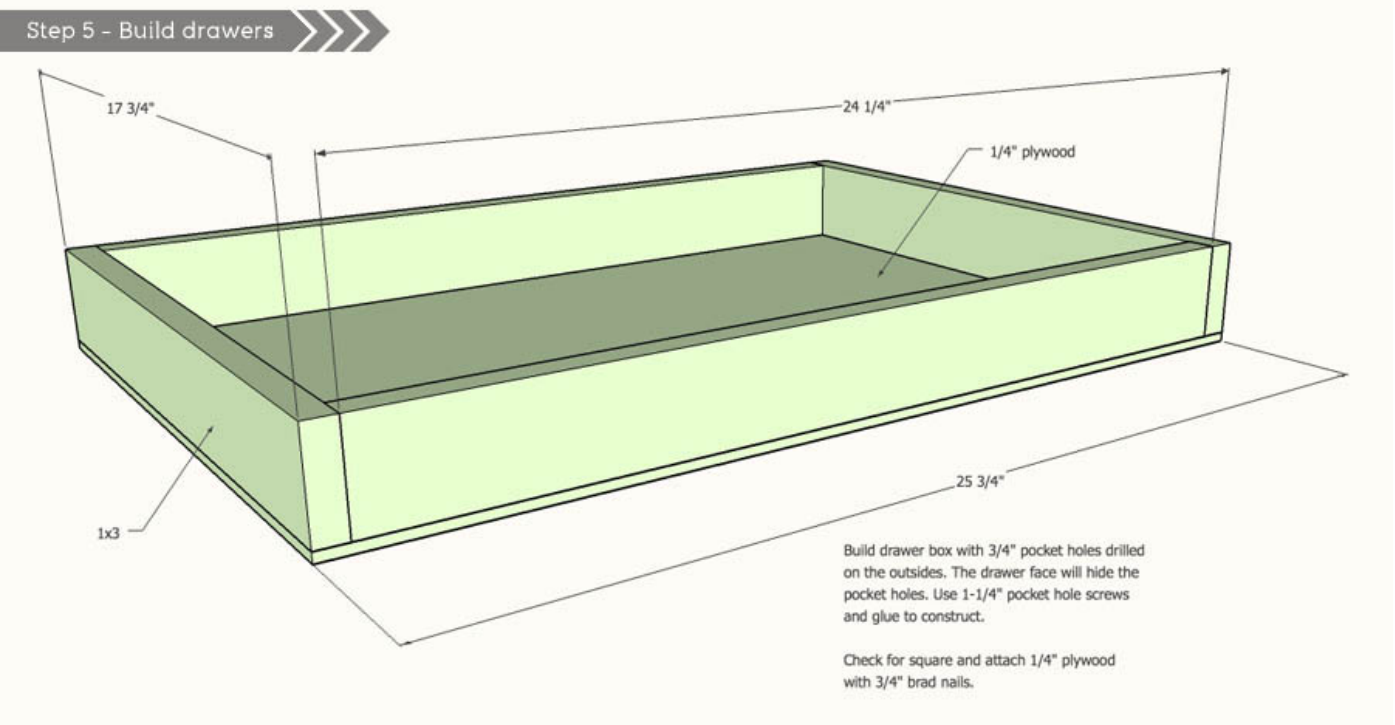

Step 6 - Install drawer slides

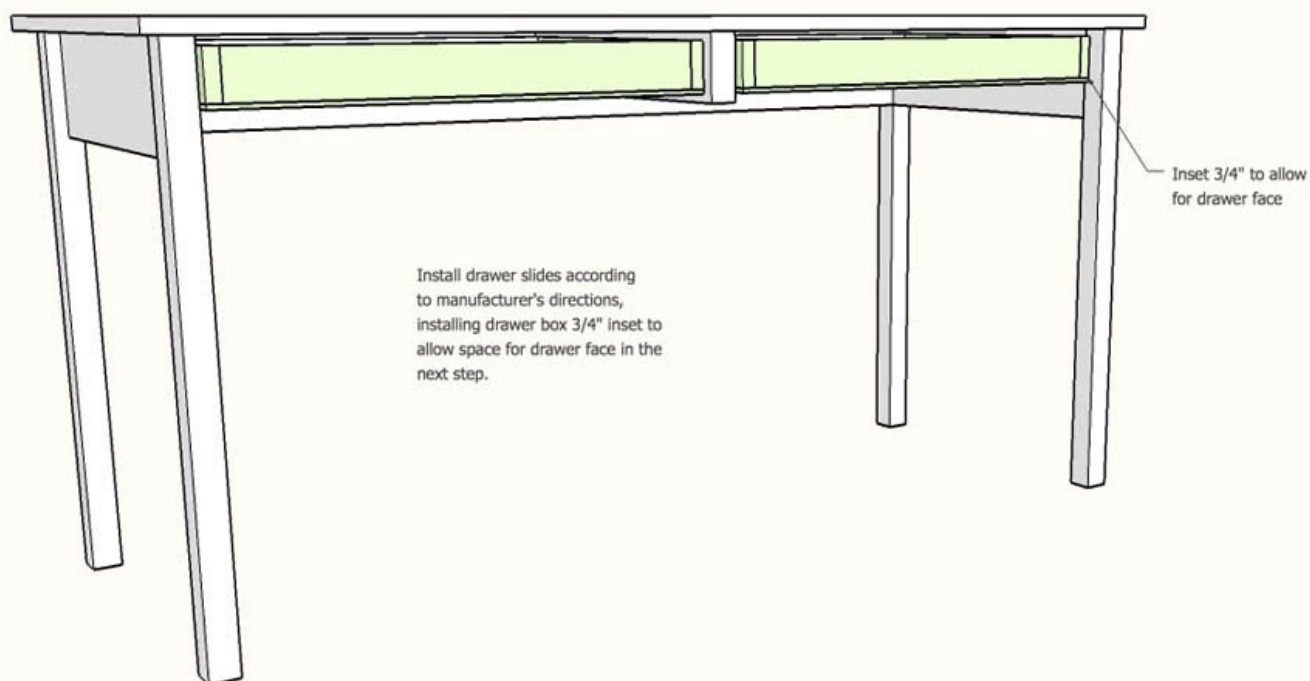

Step 7 - Attach drawer face

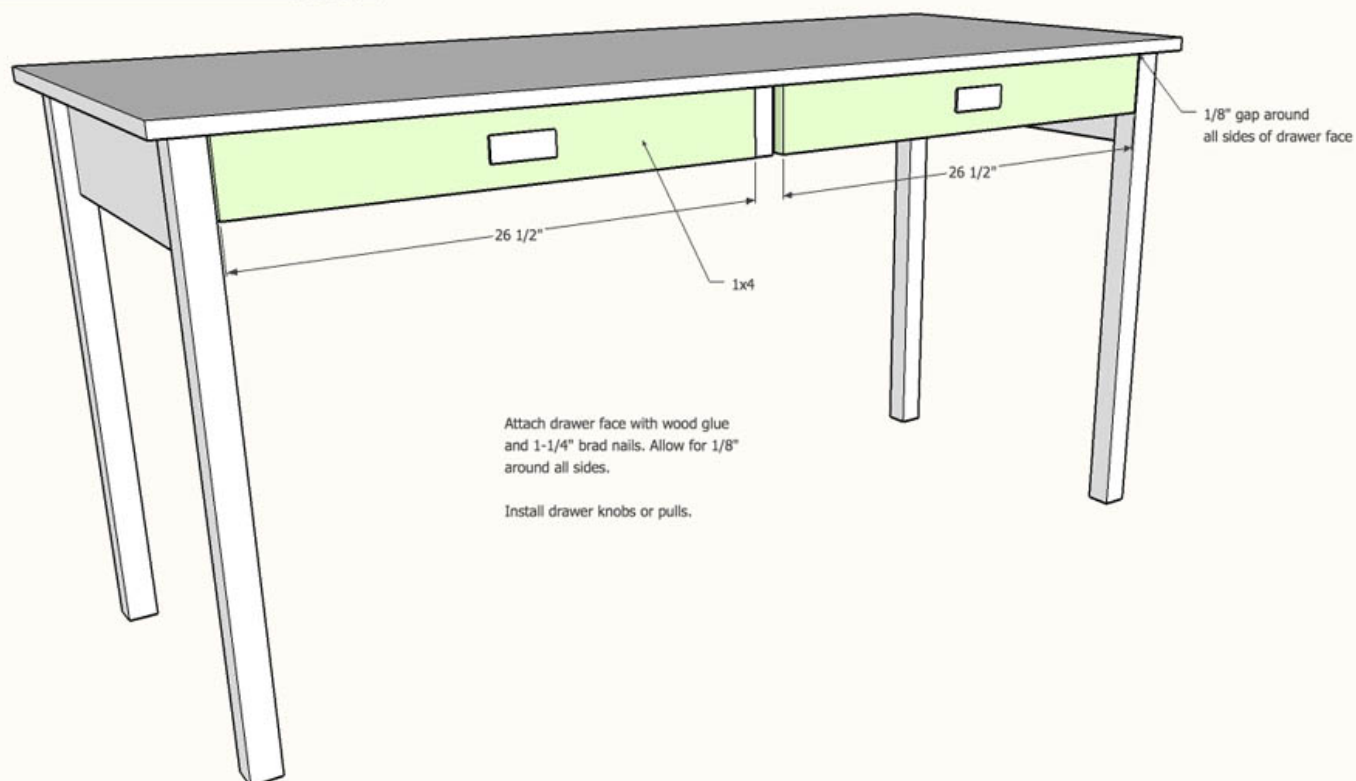

Step 8 - Attach trim

