


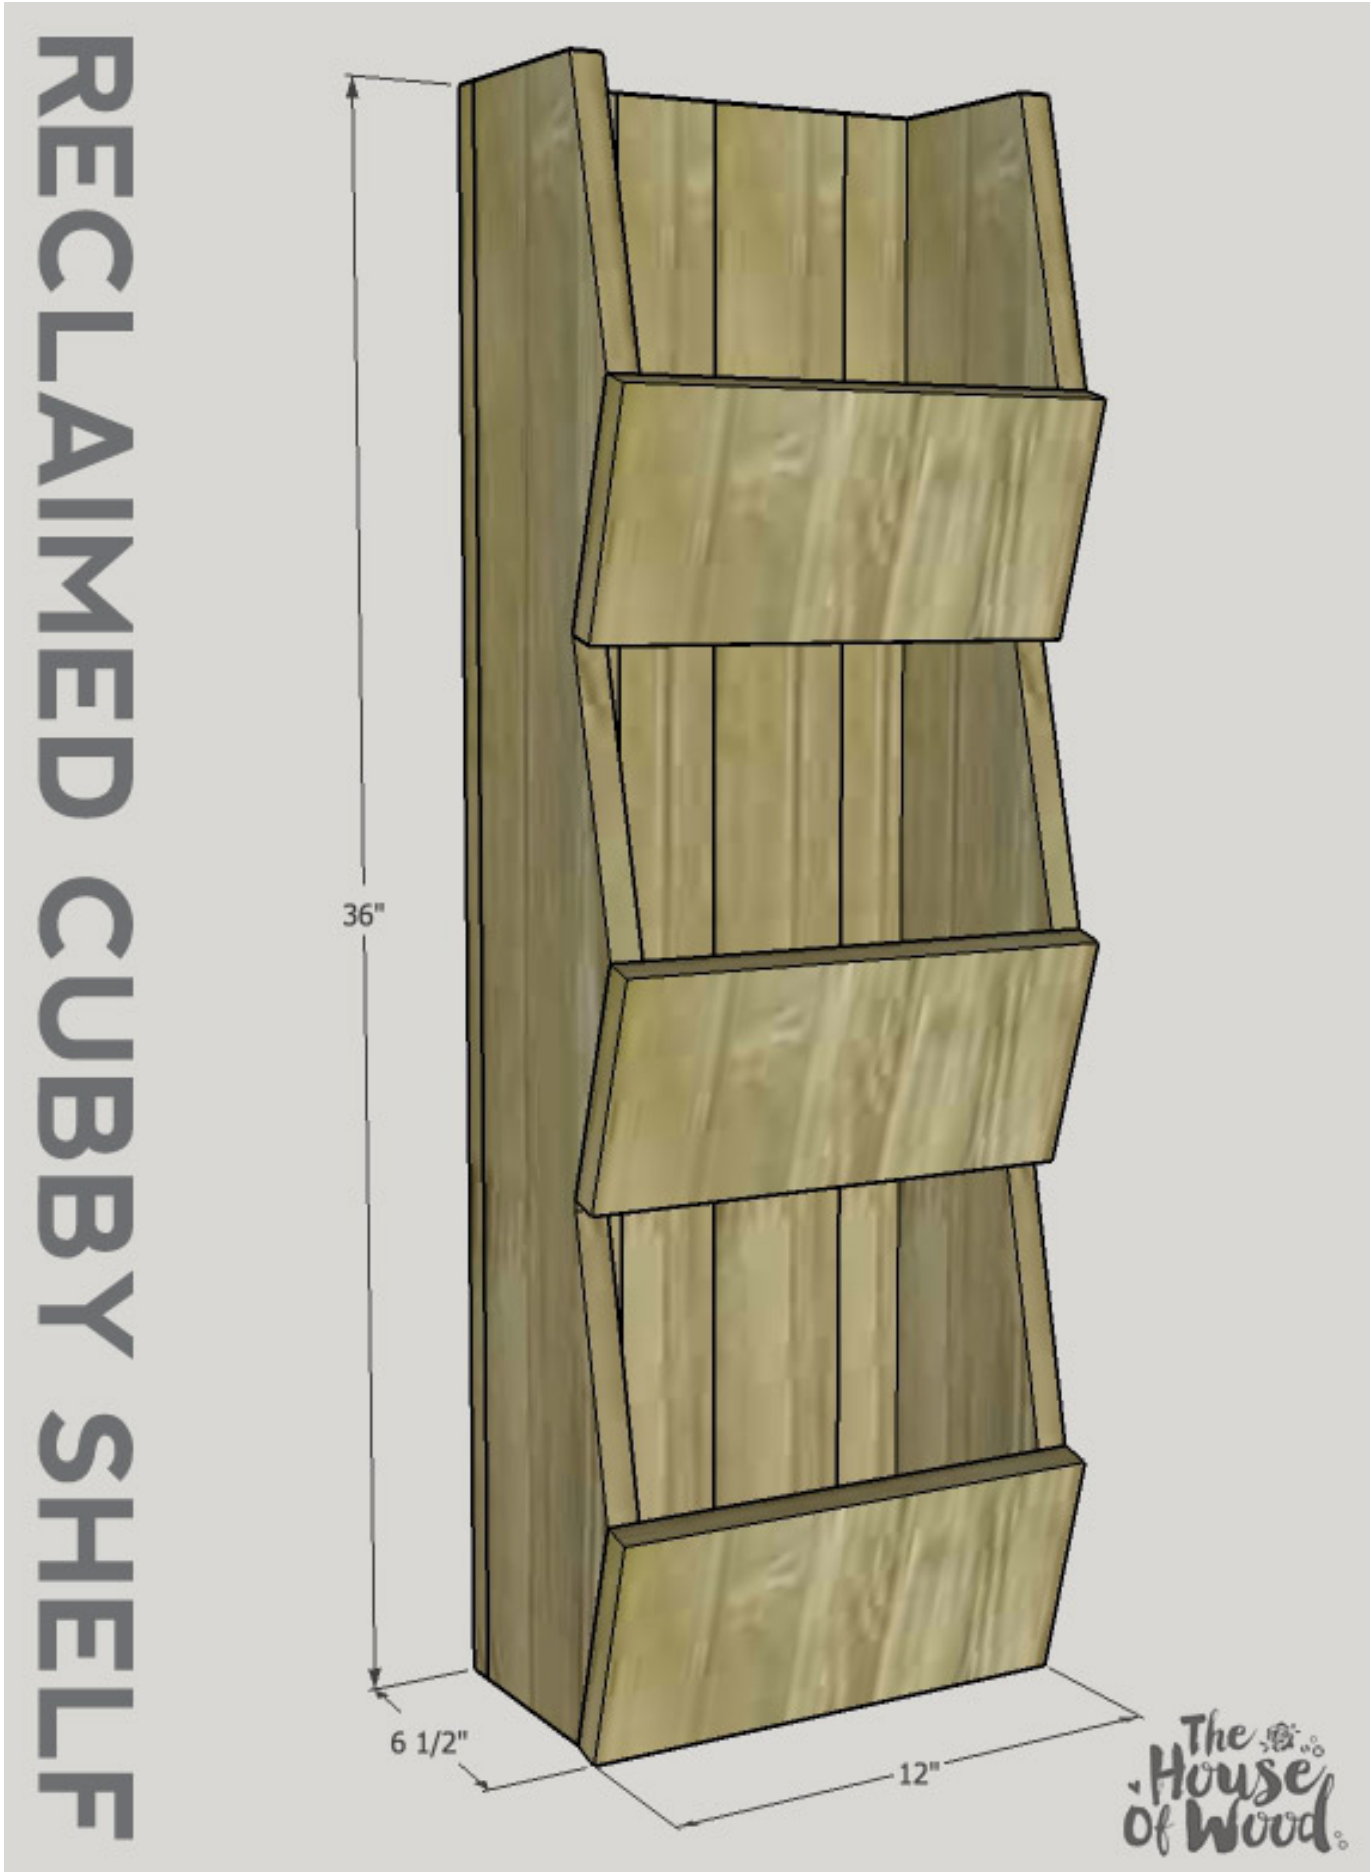

MATERIALS:

1 – 1x8x8'
1 – 1x6x6'
1 – 1x5x6'
1 – 1x4x8'
1 – 1x3x8'

CUT LIST:

2 – 1x8 @ 36" (sides)
2 – 1x3 @ 36" (back)
2 – 1x4 @ 36" (back)
3 – 1x5 @ 10-1/2" (shelves)
3 – 1x6 @ 12" (front)


TOOLS:

Tape Measure
Pencil
Circular Saw
Kreg Jig
Safety Glasses

Speed Square
Drill
Jigsaw
Brad Nailer or Hammer
Hearing Protection


STEP 1

Use a jigsaw and cut out the two side panels out of a 1x8 board as shown. Drill $\frac{3}{4}$ " pocket holes into the interior of the side panels facing toward the back.

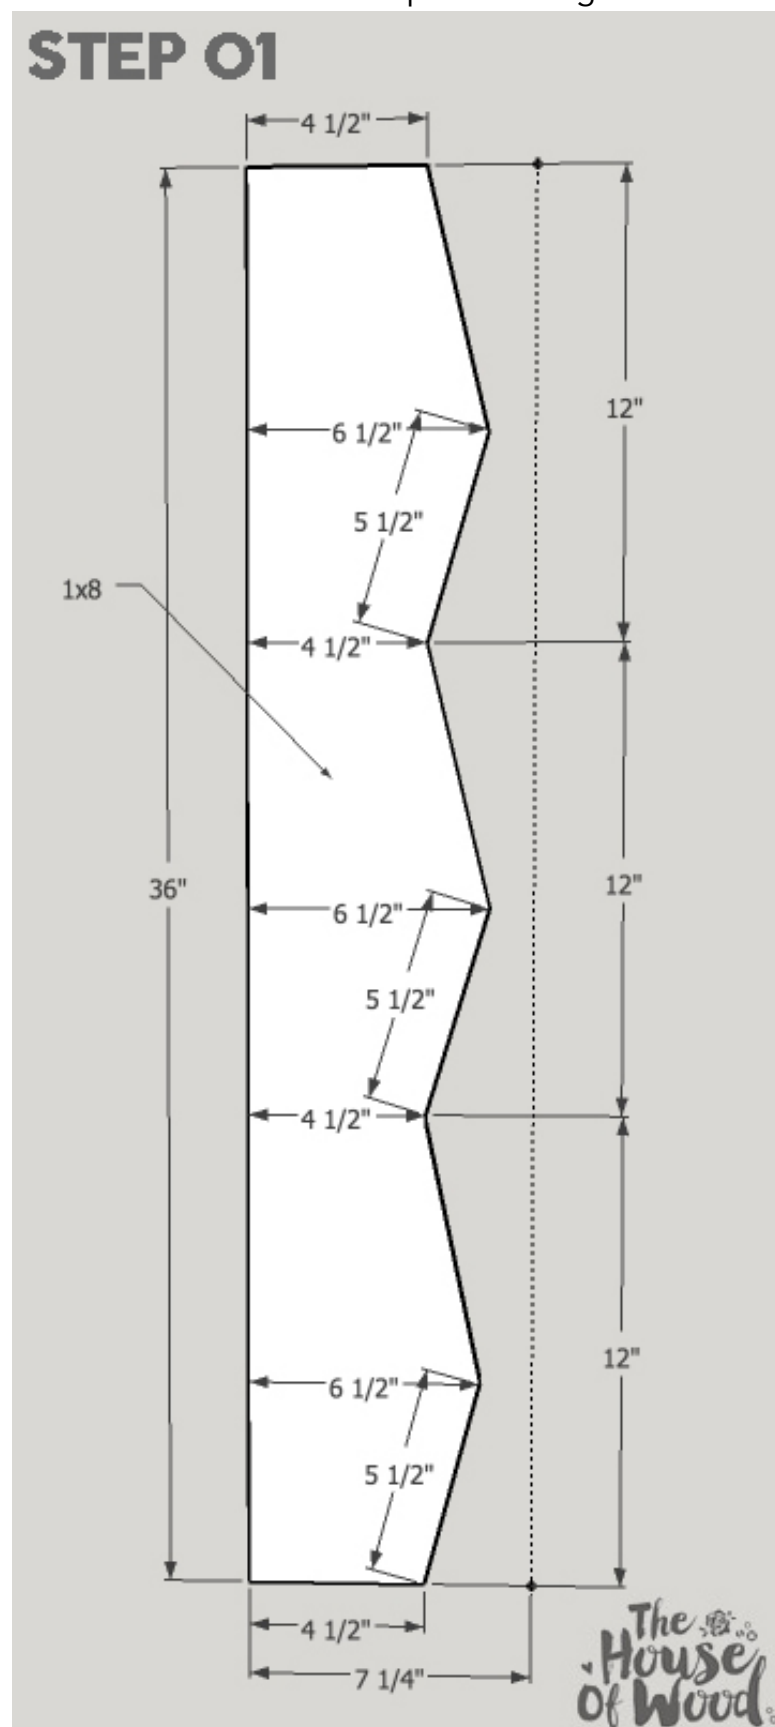


STEP 2

Drill $\frac{3}{4}$ " pocket holes into the back boards and attach plank-style with 1-1/4" pocket hole screws. Alternate the 1x3 and 1x4 boards for a 'reclaimed' look. Then attach the side panels with 1-1/4" pocket hole screws.

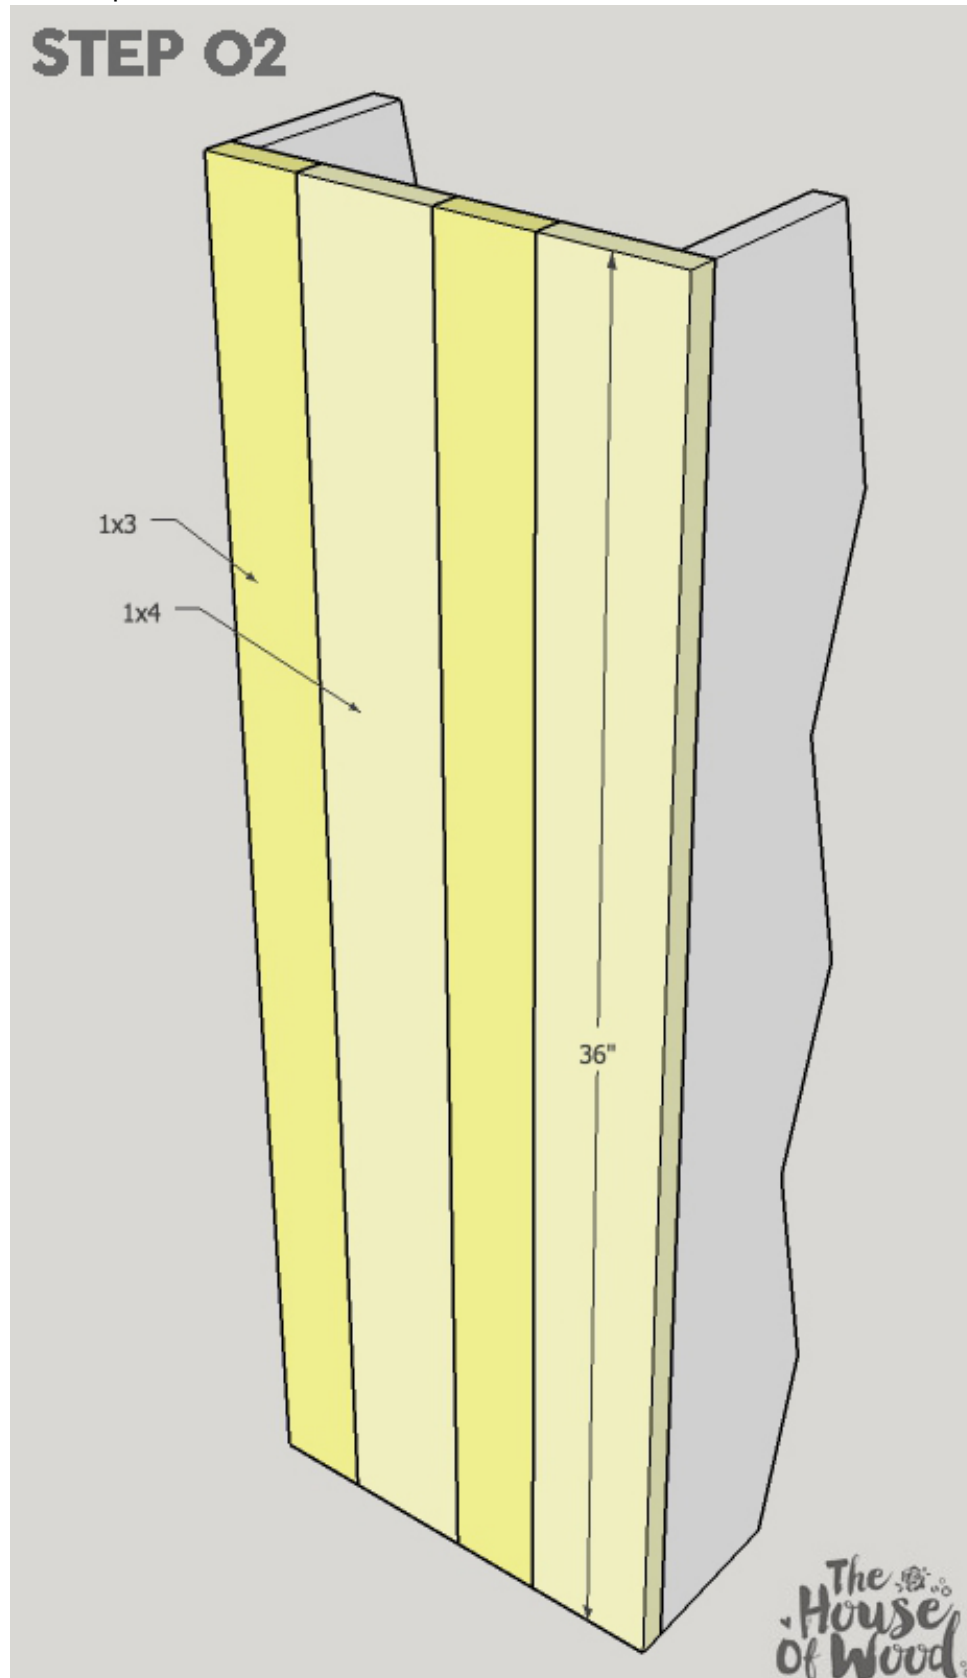

STEP 3

Drill $\frac{3}{4}$ " pocket holes on the underside of the shelf pieces and attach to carcass with 1-1/4" pocket hole screws.

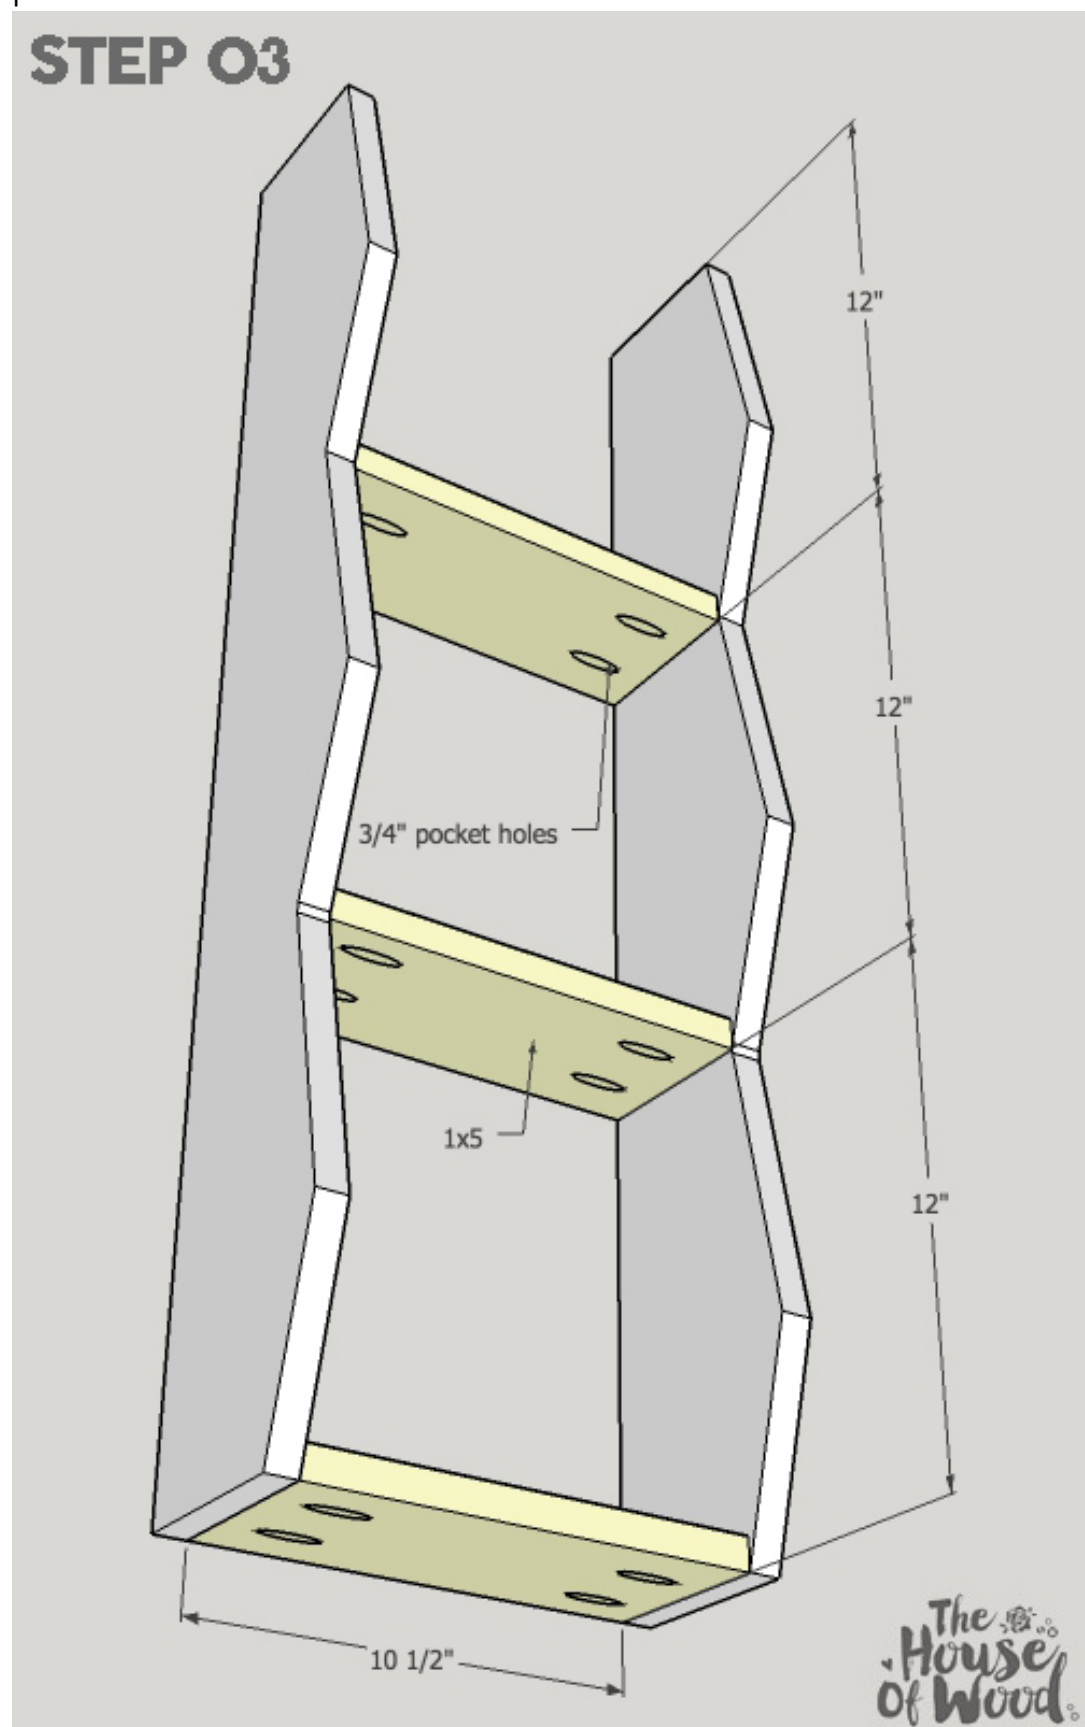

STEP 4

Attach the front panels with 1-1/4" brad nails and wood glue.

STEP 04